




# AirCard<sup>®</sup> 750 Wireless Network Card

## Installation Guide

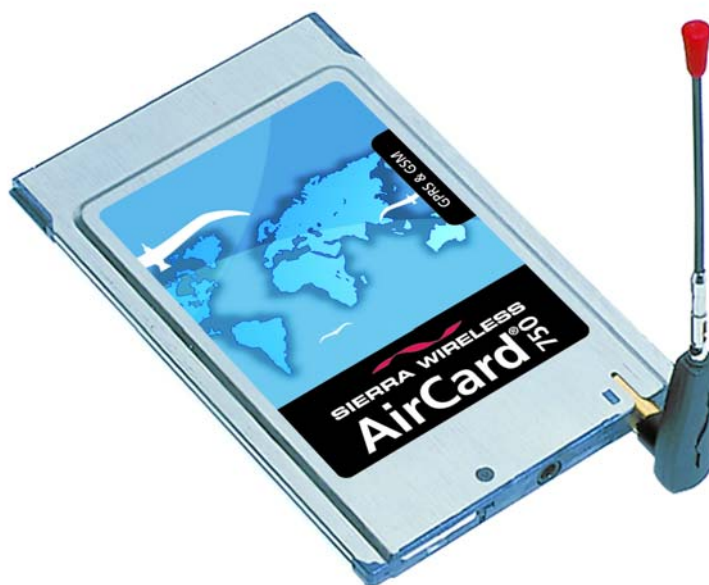

2130204  
Rev 1.3



## Important Notice

Because of the nature of wireless communications, transmission and reception of data can never be guaranteed. Data may be delayed, corrupted (i.e., have errors) or be totally lost. Although significant delays or losses of data are rare when wireless devices such as the Sierra Wireless network card are used in a normal manner with a well-constructed network, the Sierra Wireless network card should not be used in situations where failure to transmit or receive data could result in damage of any kind to the user or any other party, including but not limited to personal injury, death, or loss of property. Sierra Wireless, Inc. and its affiliates accept no responsibility for damages of any kind resulting from delays or errors in data transmitted or received using the Sierra Wireless network card, or for failure of the Sierra Wireless network card to transmit or receive such data.

## Safety and Hazards

Do not operate the Sierra Wireless AirCard<sup>®</sup> wireless network card in areas where blasting is in progress, where explosive atmospheres may be present, near medical equipment, life support equipment, or any equipment which may be susceptible to any form of radio interference. In such areas, the Sierra Wireless network card **MUST BE POWERED OFF**. The Sierra Wireless network card can transmit signals that could interfere with this equipment.

Do not operate the Sierra Wireless network card in any aircraft, whether the aircraft is on the ground or in flight. In aircraft, the Sierra Wireless network card **MUST BE POWERED OFF**. When operating, the Sierra Wireless network card can transmit signals that could interfere with various onboard systems.

---

*Note: Some airlines may permit the use of cellular phones while the aircraft is on the ground and the door is open. Sierra Wireless network cards may be used at this time.*

---

The driver or operator of any vehicle should not operate the Sierra Wireless network card while in control of a vehicle. Doing so will detract from the driver or operator's control and operation of that vehicle. In some states and provinces, operating such communications devices while in control of a vehicle is an offence.

## FCC RF Exposure Information

In August 1996 the Federal Communications Commission (FCC) of the United States with its action in Report and Order FCC 96-326 adopted an updated safety standard for human exposure to radio frequency (RF) electromagnetic energy

## Limitation of Liability

## Patents

emitted by FCC regulated transmitters. Those guidelines are consistent with the safety standard previously set by both U.S. and international standards bodies. The design of this wireless network card complies with the FCC guidelines and these international standards.

Use only the supplied or an approved antenna. Unauthorized antennas, modifications, or attachments could impair call quality, damage the phone, or result in violation of FCC regulations.

**To comply with FCC RF exposure requirements (US) the AirCard PCS GSM modem card must be operated with a minimum separation distance of 2.5 cm (1 inch) between the user/nearby persons and the antenna. Always place the antenna in the upright position (oriented vertically) when using the AirCard in a laptop computer.**

For more information about RF exposure, please visit the FCC web site at [www.fcc.gov](http://www.fcc.gov).

The information in this manual is subject to change without notice and does not represent a commitment on the part of Sierra Wireless, Inc. or its affiliates. SIERRA WIRELESS, INC. AND ITS AFFILIATES SPECIFICALLY DISCLAIM LIABILITY FOR ANY AND ALL DIRECT, INDIRECT, SPECIAL, GENERAL, INCIDENTAL, CONSEQUENTIAL, PUNITIVE OR EXEMPLARY DAMAGES INCLUDING, BUT NOT LIMITED TO, LOSS OF PROFITS OR REVENUE OR ANTICIPATED PROFITS OR REVENUE ARISING OUT OF THE USE OR INABILITY TO USE ANY SIERRA WIRELESS PRODUCT, EVEN IF SIERRA WIRELESS, INC. AND/OR ITS AFFILIATES HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES OR THEY ARE FORESEEABLE OR FOR CLAIMS BY ANY THIRD PARTY. NOTWITHSTANDING THE FOREGOING, IN NO EVENT SHALL SIERRA WIRELESS, INC. AND/OR ITS AFFILIATES' AGGREGATE LIABILITY ARISING UNDER OR IN CONNECTION WITH THE SIERRA WIRELESS PRODUCT, REGARDLESS OF THE NUMBER OF EVENTS, OCCURRENCES OR CLAIMS GIVING RISE TO LIABILITY, BE IN EXCESS OF THE PRICE PAID BY THE PURCHASER FOR THE SIERRA WIRELESS PRODUCT.

Portions of this product are covered by some or all of the following US patents:

5,515,013	5,617,106	5,629,960	5,682,602	5,748,449
5,845,216	5,847,553	5,878,234	5,890,057	5,929,815
6,169,884	6,191,741	6,199,168	6,327,154	6,339,405
D367,062	D372,248	D372,701	D416,857	D442,170

**Copyright**

**Trademarks**

D452,495 D452,496 and other patents pending.


©2003 Sierra Wireless, Inc. All rights reserved.

AirCard<sup>®</sup> and Heart of the Wireless Machine<sup>®</sup> are registered trademarks of Sierra Wireless, Inc.

Sierra Wireless, the Sierra Wireless logo, the red wave design, the red-tipped antenna, and Watcher are trademarks of Sierra Wireless, Inc.

Other trademarks are the property of the respective owners.

All product specifications are subject to change without notice.

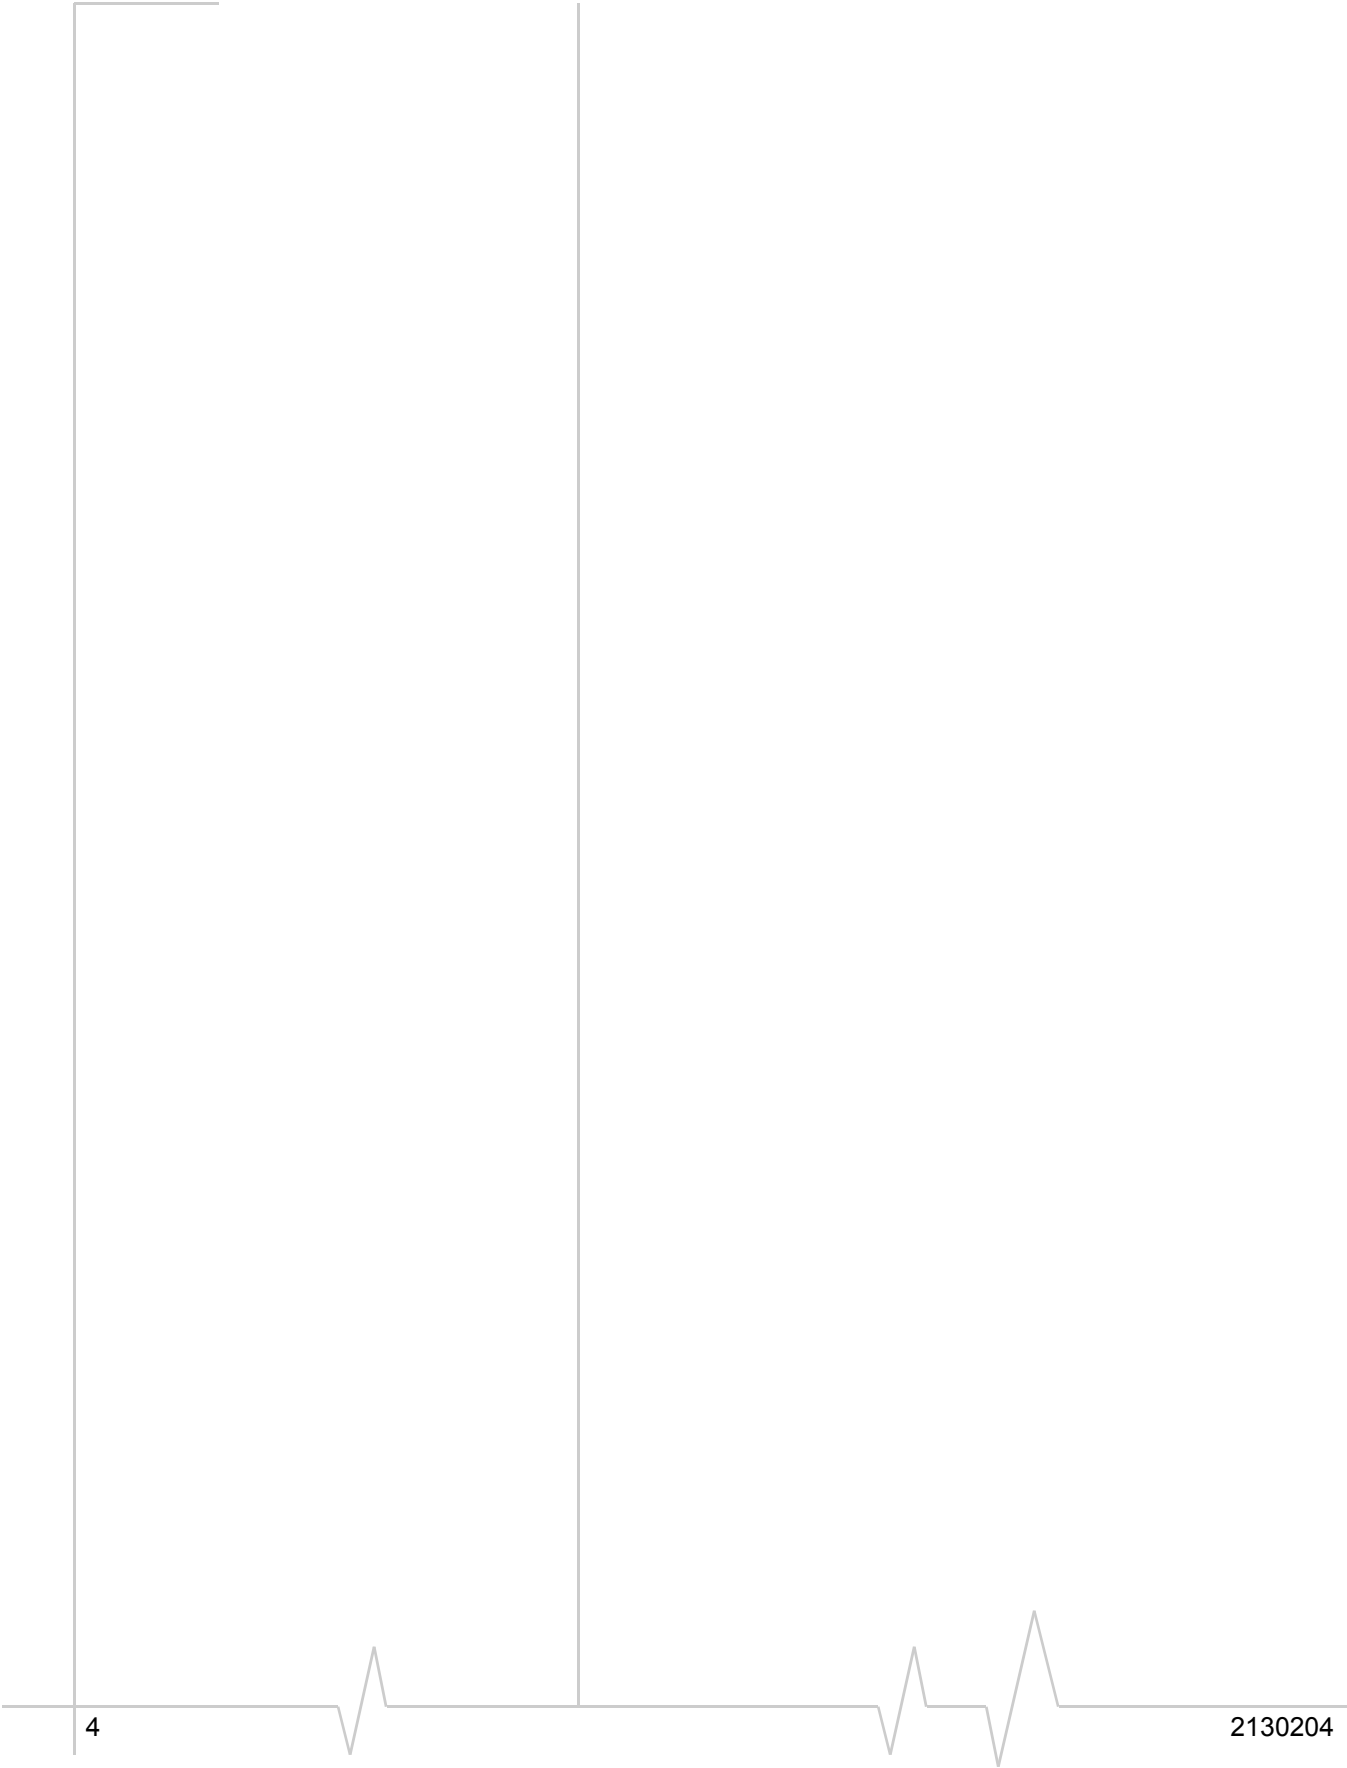

# »» | Table of Contents

<b>Introducing the AirCard® 750 Wireless Network Card</b> .....	<b>9</b>
Supported operating systems .....	9
The AirCard as a network card .....	9
The AirCard as a mobile phone .....	10
Supported GSM frequency bands .....	10
Your account and coverage area .....	10
AirCard software .....	11
Before you can begin using the AirCard .....	11
Package contents .....	12
<b>The SIM Card and Your Account</b> .....	<b>13</b>
Inserting a SIM card into your AirCard .....	14
Removing a SIM card .....	14
<b>Installation on Notebook PCs</b> .....	<b>17</b>
System requirements .....	17
Installation on Windows 95, 98, 2000, and Me .....	18
Installation on Windows XP .....	19
Installation on Windows NT .....	21
Inserting the AirCard .....	22
Installing the network card driver .....	22
Installing the modem driver .....	23
Changing the interrupt .....	24
Setting Internet Explorer to use the AirCard.....	24
<b>Installation on Devices Running Windows CE</b> .....	<b>27</b>
System requirements .....	27
ActiveSync installation requirements .....	28

Flash card installation requirements .....	29
Pocket PC and Handheld PC installation .....	29
Windows CE .NET device installation .....	31
Extracting the CAB file to the host .....	31
ActiveSync installation .....	31
Flash card installation .....	32
Inserting the AirCard into a Pocket PC .....	33
Inserting the AirCard into a Handheld or Tablet PC .....	34
<b>Configuring Your Account .....</b>	<b>37</b>
Setting up a profile .....	37
The Advanced Profile window .....	39
The Default Profile button .....	40
<b>Care and Maintenance of Your Network Card .....</b>	<b>41</b>
Stopping and ejecting the AirCard on a notebook PC .....	42
Ejecting the AirCard on a Pocket PC .....	43
Ejecting the AirCard on a Handheld or Tablet PC .....	43
<b>Watcher™ Basics .....</b>	<b>45</b>
Launching Watcher .....	45
The Watcher window .....	46
Icons and indicators on the main Watcher window .....	47
View options (notebook PCs) .....	49
Status Icons .....	50
Power Options .....	50
Power Down and Up .....	50
Transmit power consumption .....	51
Frequency band and network selection .....	51

Frequency band selection .....	52
Network selection .....	52
<b>Technical Specifications .....</b>	<b>.53</b>
LED operation .....	53
Radio frequency and electrical specifications .....	54
Environmental specifications .....	55
<b>AirCard 750 Regulatory Information .....</b>	<b>.57</b>
CE approval (European Union) .....	57
Declaration of conformity for CE Marking .....	57
Industry Canada approval .....	58
Singapore IDA Safety Notices.....	58
Aircraft Safety .....	58
Explosive Atmospheres .....	58
Road Safety .....	58
Non-Ionising Radiations .....	59
FCC approval (US) .....	59





# 1: Introducing the AirCard® 750 Wireless Network Card

- Your account and coverage area
- AirCard software
- Before you can begin using the AirCard
- Package contents

*Caution: Do not insert your AirCard into your PC Card slot before installing the software.*

The AirCard 750 wireless network card is an accessory for your PC that allows you to connect to the Internet, send and receive e-mail, and connect to a corporate network, without the need of a network cable or phone line. The AirCard 750 also allows you to use your PC as a mobile phone.

The wireless technology used by the cards is called GPRS (General Packet Radio Service). This is a high-speed, data-only service that is an add-on to the GSM (Global System for Mobile Communications) cellular network—a type of network used to provide cellular phone service.

The AirCard fits into the standard (Type II) PC Card slot available on most notebook, Handheld, and Tablet PCs. You can also use the AirCard with a Pocket PC provided you have the PCMCIA jacket accessory.

## Supported operating systems

The AirCard 750 wireless network card works in:

- Notebook PCs running Windows 95, 98 SE, Me, NT, XP, NT 4.0, and 2000
- Tablet, Handheld and Pocket PCs running Windows CE 3 or CE .NET (CE 4)

For more details, see the ‘System requirements’ on page 17 (notebooks) and page 27 (CE devices).

## The AirCard as a network card

The AirCard 750 can be configured to provide the “always-on” data connection that an Ethernet card or other wired LAN card provides. That is, you can set options in Watcher™ (a program that comes with the AirCard) that will cause the AirCard to establish a network connection whenever you

insert it, assuming GPRS service is available. Otherwise, you can configure Watcher to connect only when you select a button.

## The AirCard as a mobile phone

You can use the AirCard 750 as a phone simply by connecting an approved headset. (See page 12.) The keypad for the phone is in the Watcher program.

## Supported GSM frequency bands

Every GSM network operates on one set of radio frequency bands. As a tri-band product, the AirCard 750 functions on networks operating on any of these three bands.

- **900 MHz band**—used by some European service providers
- **1800 MHz band**—used by some European and Asian service providers
- **1900 MHz band**—(also called the PCS band) used by North American service providers

## Your account and coverage area

---

*Note: If you purchased the AirCard from a GSM service provider, you may already have an account. Otherwise, your retailer should be able to provide you with the names of companies that provide this service.*

---

Companies that operate GSM networks and provide access to those networks are called service providers. You must have an account with a GSM service provider that offers GPRS service to use the AirCard.

When you obtain your account, you will be given a SIM card, otherwise called a “smart card” or “smart chip”. (Depending on how you purchased your AirCard, you may already have an account, and your SIM card may have been included in your package.) The SIM card contains account information and must be inserted in the AirCard anytime you use it.

Before you can use the AirCard, you must install the AirCard software and ensure that your AirCard is configured to use your account. Instructions on completing these steps are provided in the chapters that follow.

Once installed and configured, you can connect to the Internet with the AirCard in any area in which you can obtain GPRS service. Your ability to obtain GPRS service depends on these factors:

*Note: The fee for service is usually higher when you are “roaming” (connected to a network other than the one belonging to your service provider).*

- **Proximity to a GPRS/GSM network**— You must be within the coverage area of a GSM network on which GPRS has been implemented, in order to use the AirCard.
- **Service provider**— If you are within the coverage area of a network that is not operated by your own service provider, you can only obtain service if there is a roaming agreement between your service provider and the network operator.
- **Account provisions**— Your account may restrict your usage to certain networks or limit the amount of time you can use the network.

Most service providers have coverage maps on their web sites.

## AirCard software

The AirCard comes with this software (made by Sierra Wireless, Inc.):

- The Watcher program that you use to manage the AirCard and monitor your connections
- The driver software that forms the interface between the network card and your Windows operating system
- For notebook PCs only, the Network Adapter Manager software that allows you to switch between the AirCard and other network cards

## Before you can begin using the AirCard

Before you can use the AirCard for the first time you must:

1. Install the AirCard software: Watcher, the Network Adapter Manager (notebooks only), and the AirCard driver.
2. Attach the antenna, insert the SIM into the AirCard and insert the AirCard into your PC Card slot. (Do not insert the AirCard before installing the software.)
3. Obtain a GSM/GPRS account (if this wasn't done when you purchased the AirCard).
4. Configure the AirCard to use your account (unless it was pre-configured.)
5. If your Internet browser is configured to use a dial-up modem, you may need to set it to use a network card.

The next three chapters guide you through this process.

## Package contents

Your AirCard package contains the following:

- AirCard 750 wireless network card
- Antenna
- Installation CD containing the AirCard software and anthis installation guide
- Quick reference card

If you want to use the AirCard 750 as a phone, a headset is necessary. Only a 4-wire headset with a 2.5 mm connector will work with the AirCard 750. Approved headsets are available on the Sierra Wireless web site, [www.sierrawireless.com](http://www.sierrawireless.com).

## 2: The SIM Card and Your Account

- Inserting a SIM card into your AirCard
- Removing a SIM card

---

*Note: Without a valid SIM card and a valid account, your AirCard will not work.*

---

---

*Note: Keep a written record, in a secure place, of the account information that your service provider gives you. Instructions on creating a profile are in the section ‘Configuring Your Account’ on page 37.*

---

You require a GSM/GPRS account and a SIM (Subscriber Identity Module) card to use the AirCard. The SIM card is a small chip (about the size of a postage stamp) that you insert into the AirCard. The SIM contains account information used by the network to validate your access.

Depending on how you purchased your AirCard, you may already have an account. In this case, the SIM should be included in your package. Otherwise, your retailer should direct you to a local company that provides GSM service.

To activate an account, the service provider needs from you:

- Billing information (such as a credit card number) used to collect payment for your network usage
- Possibly the IMEI (International Mobile Equipment Identity)—a number that identifies your device (AirCard model) on the GSM network. This number is printed on the AirCard box and on the AirCard label.

Your AirCard must be configured to use your account. If purchased from a service provider, your AirCard may have been pre-configured. Otherwise, you must obtain the necessary information and set up a profile in Watcher. Depending on your service provider and account, some or all of this information must be entered in your profile:

- Phone number
- APN<sup>1</sup>
- User name and password

Less commonly you may need to specify:

- An IP (Internet Protocol) address for your AirCard
- A DNS<sup>2</sup> address or addresses
- That IP header compression is to be used

- 
1. APN (Access Point Name)—Name of the gateway between the wireless network and other networks such as the Internet or a corporate network (Example: internet.serviceprovider.ca).
  2. DNS (Domain Name Server)—a computer that converts web site names, such as www.sierrawireless.com, into IP addresses, such as 64.114.87.11.

---

*Note: If you change GSM service providers (such as if you move to a new city), you will need a new SIM card from your new service provider. You will also need to enter your new profile information into the Watcher software (see “Configuring Your Account” on page 37).*

---

---

*Note: To prevent the SIM from becoming jammed in the AirCard slot, ensure the edge of the SIM is smooth before inserting it. Do not attach labels to your SIM as this may also cause it to become jammed.*

---

## Inserting a SIM card into your AirCard

To install your SIM card into the AirCard network card, follow these steps:

1. If your SIM is attached to a card, detach it and remove any fragments of the card stuck to the SIM.
2. Hold the AirCard network card with the label on top and the antenna closest to you.
3. Locate the thin SIM card slot on the left side of the AirCard PC Card’s antenna end.
4. Orient the SIM card, as shown in the diagram on the bottom side of the AirCard.
5. Insert the end of the SIM card into the slot, and gently push it until it is fully inserted.



Figure 2-1: Inserting the SIM card into the AirCard SIM card slot

Once the SIM card is properly inserted, it should not extend beyond the end of the card. See Figure 2-2.



Figure 2-2: A SIM card properly inserted

## Removing a SIM card

To remove the SIM card, you will need a narrow object, such as a pen or a straightened paper clip, to push into the eject hole.

1. Place the AirCard PC Card on a smooth, hard surface such as a tabletop, as shown in Figure 2-3.




*Figure 2-3: Positioning a pen to eject the SIM card*

- 2.** Position your pen or paper-clip above the eject hole, which is on the top surface of the AirCard housing, just to the right of the SIM card slot. (See the photo above.)
- 3.** Press down gently (without excessive force) on the eject hole. The SIM card should pop out of its slot.



*Figure 2-4: Ejecting and removing the SIM card*

- 4.** Gently pull the SIM card from the slot until it slides free.

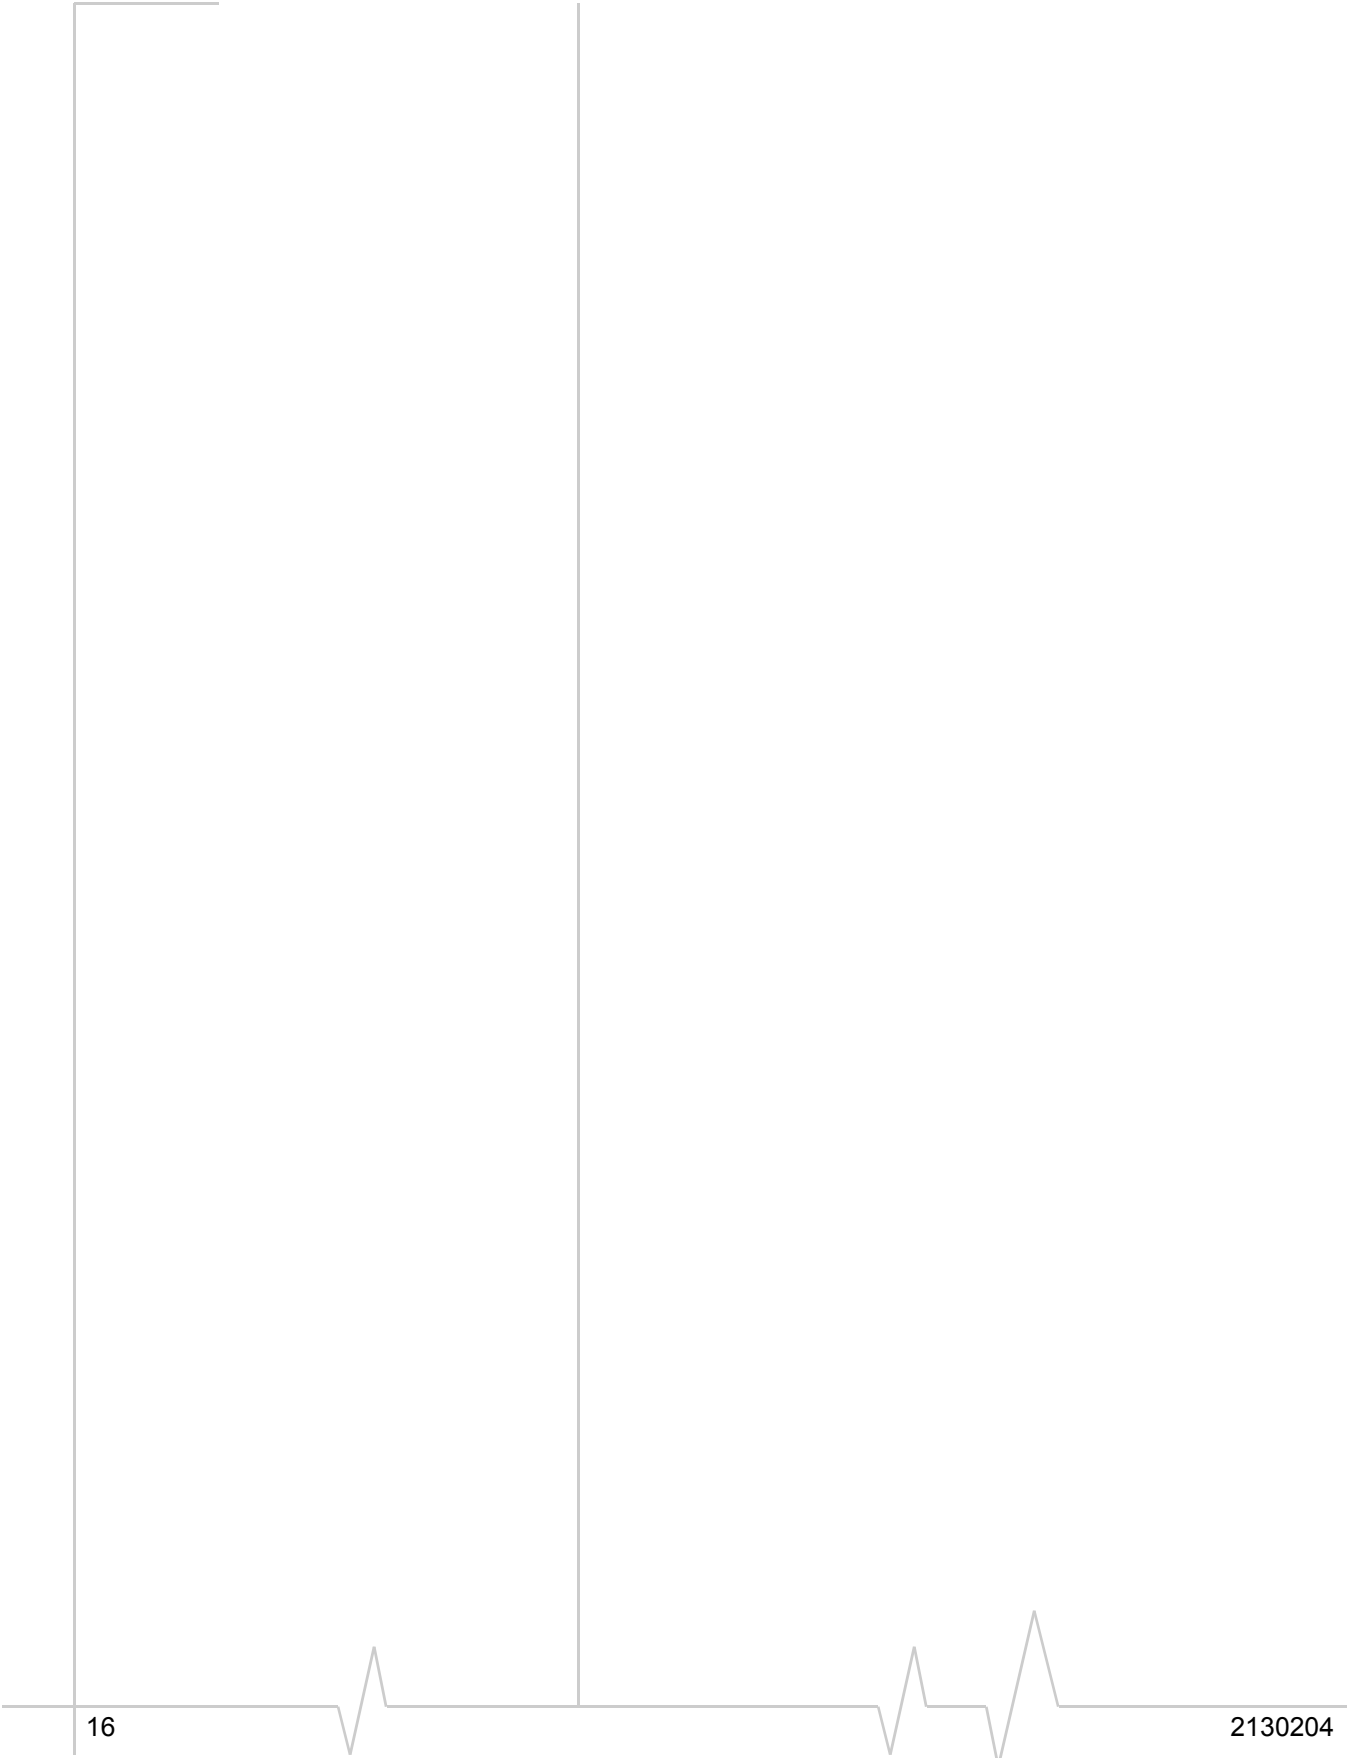

## 3: Installation on Notebook PCs

- System requirements
- Installation on Windows 95, 98, 2000, and Me
- Installation on Windows XP
- Installation on Windows NT
- Setting Internet Explorer to use the AirCard

**Note: Do not insert the AirCard into your PC card slot before installing the software.**

*Note: Winsock is a component of the Windows operating system required by the AirCard. The version of Winsock shipped with Windows 95 OSR2 does not meet the AirCard requirements. If you are using Windows 95 OSR2 and have not yet upgraded to Winsock2 or later, you must do so before installing the AirCard. Winsock2 can be downloaded from the Microsoft web site, [www.microsoft.com](http://www.microsoft.com).*

This chapter guides you through the steps necessary to making the AirCard operational on a notebook PC. The basic steps are:

1. Insert the AirCard CD into your CD-ROM drive and install Watcher and the Network Adapter Manager.
2. Insert the AirCard into the PC card slot and install the AirCard driver from the CD.

Before you begin the installation process, ensure your PC is running a supported operating system and meets the hardware requirements described below.

### System requirements

The AirCard wireless network card is supported on:

- Windows 95 OSR2 and higher with Winsock2
- Windows 98 SE
- Windows 2000 with Service Pack 1
- Windows NT 4.0 with Service Pack 6a and Networking installed
- Windows Me
- Windows XP (Home and Professional versions)

To install the AirCard, you require these system resources:

**Table 3-1: System resource requirements**

Card slots	1 Type II PCMCIA (PC Card) slot
Disk drive	CD-ROM
I/O resources	1 IRQ, 40 bytes I/O space
Memory	32 MB

---

*Note: Users of Windows 2000 must be logged in with administrative privileges.*

---

## Installation on Windows 95, 98, 2000, and Me

---

*Note: Users of Windows 95 must have Winsock2 installed. See the note in the margin above. You must also verify that your PC Card slots are enabled and that TCP/IP is installed. For instructions on installing TCP/IP and enabling your PC Card slots, see the Windows 95 online Help (available by selecting **Start > Help**).*

---

---

*Note: You may require your Windows CD (particularly if you are using Windows 95). Ensure you have the CD before proceeding.*

---

1. If the AirCard CD is not already in your CD-ROM drive, insert it. The CD should autostart and display a menu.
  - If the CD does not autostart, select **Start > Run** and enter **d:\launch.exe** where **d** is the drive letter of your CD-ROM drive.
2. From the CD start-up menu, select **notebook installation and documentation** and then **notebook software installation** to launch the InstallShield® Wizard.
3. Use the **Next** and **Back** buttons to navigate through the wizard.

Using the default settings for the Destination Location and Program Folder is recommended unless you have special requirements and an advanced understanding of PC configuration.

4. If you are using Windows 2000, the **Digital Signature Not Found** window appears. (This may happen several times.) Click **Yes** (to continue the installation).
5. When prompted to insert the AirCard:
  - a. Attach the antenna.



Figure 3-1: Attaching the antenna to the AirCard

---

*Note: Do not forcefully insert the AirCard. This may damage connector pins. If you have more than one PC Card slot, you may obtain better signal strength using the top slot.*

---

- b. With the SIM card inserted into the AirCard (page 14) and the label of the AirCard facing up, carefully insert the AirCard into your PC Card slot.



Figure 3-2: Inserting the AirCard

- c. Click OK in the window requesting you to insert the AirCard.

Windows detects that a new device has been inserted and launches a wizard that guides you through the driver installation.

6. If prompted to eject the card and restart the PC:
  - a. Eject the AirCard.
  - b. Click **Yes** to restart your computer.
  - c. Only after your computer has restarted and Windows has finished launching, insert the AirCard.

Watcher should launch automatically when the AirCard is inserted. If your AirCard has not yet been configured to use your account, you are prompted to do so. See “Configuring Your Account” on page 37.

To close the CD start-up menu, click **Demoshield** on the Taskbar to restore the window, then use the **exit** option in the lower right corner of the window.

## Installation on Windows XP

1. If the AirCard CD is not already in your CD-ROM drive, insert it. The CD should autostart and display a menu.
  - If the CD does not autostart, select **Start > Run** and enter **d:\launch.exe** where **d** is the drive letter of your CD-ROM drive.
2. From the CD start-up menu, select **notebook installation and documentation** and then **notebook software installation** to launch the InstallShield Wizard.

---

*Note: Depending on the XP installation, you may require administrative privileges.*

---

3. Use the **Next** and **Back** buttons to navigate through the wizard.  
Using the default settings for the Destination Location and Program Folder is recommended unless you have special requirements and an advanced understanding of PC configuration.
4. If the **Software Installation** window appears, you can safely ignore the warning. Click **Continue Anyway**, each time it appears.
5. When prompted to insert the AirCard:
  - a. Attach the antenna.



Figure 3-3: Attaching the antenna to the AirCard

---

*Note: Do not forcefully insert the AirCard. This may damage connector pins.*

---

- b. With the SIM card inserted into the AirCard (page 14) and the label of the AirCard facing up, carefully insert the AirCard into your PC Card slot.



Figure 3-4: Inserting the AirCard

- c. Click **OK** in the window requesting you to insert the AirCard.

The Found New Hardware wizard launches.

Windows should detect that a new device has been inserted and launch a wizard that guides you through the driver installation.

6. On the first window of the Found New Hardware Wizard, select **Install the software automatically (Recommended)** and click **Next**.

7. If the **Software Installation** window appears, you can safely ignore the warning. Click **Continue Anyway**, each time it appears.
8. Click **Finish** and repeat steps 6 to 8 as prompted.
9. When you see a window with the message "AirCard® 710/750 has been successfully installed.", click **OK**.

Watcher should launch automatically when the AirCard is inserted. If your AirCard has not yet been configured to use your account, you are prompted to do so. See "Configuring Your Account" on page 37.

To close the CD start-up menu, click **Demoshield** on the Taskbar, then use the **exit** option in the lower right corner of the window.

## Installation on Windows NT

---

*Note: The AirCard driver requires that Windows Networking is installed. Also the PC Card slots must be enabled. If you are not certain that networking is installed and the slots enabled, see the Windows NT user documentation for instructions. You must be logged in with administrative privileges.*

---



---

*Note: You must re-install the Windows NT Service Pack after you install the AirCard driver. Ensure you have your Service Pack CD before you begin. (Version 6a is supported.)*

---



---

*Note: Windows system files may also be required to complete the installation. These files are located on the Windows NT CD.*

---

1. If the AirCard CD is not already in your CD-ROM drive, insert it. The CD should autostart and display a menu.
  - If the CD does not autostart, select **Start > Run** and enter **d:\launch.exe** where **d** is the drive letter of your CD-ROM drive.
2. From the CD start-up menu, select **notebook installation and documentation** and then **notebook software installation** to launch the InstallShield Wizard.
3. Use the **Next** and **Back** buttons to navigate through the wizard.

Using the default settings for the Destination Location and Program Folder is recommended unless you have special requirements and an advanced understanding of PC configuration.

On completion of the software installation, exit from the startup menu by clicking **exit** in the lower right corner.

---

*Note: Your PC must be off whenever you insert or eject the AirCard.*

---

## Inserting the AirCard

1. Close all Windows programs and turn your PC off.
2. Attach the antenna.



Figure 3-5: Attaching the antenna to the AirCard

3. With the SIM card inserted into the AirCard (page 14) and the label of the AirCard facing up, carefully insert the AirCard into your PC Card slot.



Figure 3-6: Inserting the AirCard

4. Turn on your PC.
5. Log on as Administrator.

## Installing the network card driver

1. Open the Control Panel by selecting **Start > Settings > Control Panel**.
2. Double click the Network icon to open the Network window.
3. Click the **Adapters** tab in the Network window.
4. Click the **Add...** button to open the Select Network Adapter window.
5. Click the **Have Disk...** button to open the Insert Disk window.

---

*Note: Depending on how Windows NT is configured, the prompts and windows described here may not appear in the precise order indicated. Use these instructions as a guideline to the selections you should make.*

---

*Note: The AirCard will not function with the default settings for the I/O Port , Interrupt, and Com port if any of these resources are allocated to another network card or other device. If you are familiar with the Windows NT Diagnostics window, you can check to see if these resources are available. Otherwise, leave the default settings and if the AirCard does not function following the driver installation, see the instructions on changing the interrupt on page 24.*

6. Enter **d:\Drivers\WinNT** where **d** is the drive letter for your CD-ROM drive and click **OK** to open the Select OEM Option window in which **Sierra Wireless AirCard GPRS Adapter** is selected.
7. Click **OK**. A window opens showing the settings for the I/O Port (0x800), interrupt (10) and COM port (4).
8. If you are aware that these resources are in use by another device (see the note in the margin), change the settings and click **OK**. Otherwise, click **OK** to use the default settings. Windows then copies the driver files.
9. Click **Close** to close the Network window and open the Microsoft TCP/IP Properties window.
10. Select **Sierra Wireless AirCard GPRS Adapter** in the Adapter field and select **Obtain an IP address from a DHCP Server** radio button.
11. Click **Yes** to confirm that DHCP is to be used.
12. Click **OK** to close the TCP/IP Properties window.
13. Click **No** if prompted to restart your PC. (You must restart your PC after the modem driver installation.)

On completion of this step, the network card driver is installed and you can proceed to install the modem driver. Follow the instructions in the next section.

## Installing the modem driver

1. In the Control Panel, double click the Modems icon. If the Install New Modem wizard opens, skip to step 3. Otherwise, proceed to step 2.
2. Click the **Add** button to open the Install New Modem wizard.
3. Select **Don't detect my modem, I will select it from a list** and click **Next**.
4. Select the **Have Disk** button.
5. Enter **d:\Drivers\WinNT\** where **d** is the drive letter for your CD-ROM drive and click **OK**.
6. Verify that **Sierra Wireless AirCard GPRS Modem** is displayed and click **Next**.
7. Select the **Selected Ports** radio button and select the same communications port used for the network card driver (COM 4 unless you changed it). Click **Next**.
8. Click **Finish**.
9. Click **Close** to close the Network Properties window.

*Note: You must restart your PC to complete the installation.*

10. If you are prompted to restart your PC, click **Yes**. Otherwise restart your PC from the Start menu.
11. When the PC restarts, re-install your Service Pack.

On completion of this step, the modem driver is installed and you can proceed to configure the AirCard to use your account (if it was not preactivated). See the section "Account Configuration Procedures" on page 37.

## Changing the interrupt

If the message, "Communication Failed!..." occurs when you start Watcher, a possible reason is that you have assigned an interrupt to the AirCard that has also been assigned to another device.

To change the interrupt assigned to the AirCard:

1. Open the Control Panel by selecting **Start > Settings > Control Panel**.
2. Double click the Network icon.
3. Select the **Adapters** tab.
4. Select **Sierra Wireless AirCard GPRS Adapter** and click the **Properties...** button.
5. Use the drop-down list to change the Interrupt to another number and click **OK**.
6. Close the Network window by clicking the **Close** button.
7. Restart your PC.
8. If the AirCard still does not function properly, repeat the procedure, selecting a different interrupt.


## Setting Internet Explorer to use the AirCard

If you are using Internet Explorer as your browser, and it is set to connect to the Internet through a dial-up modem, you must set it to use a LAN (local area network) card.

To set Internet Explorer version 5 or 6 to use a LAN, follow these steps:

1. In Internet Explorer, select **Tools > Internet Options**.
2. Click the **Connections** tab.
3. Click **Setup** to run the Internet Connection Wizard.

4. Select the option "I want to set up my Internet connection manually, or I want to connect through a local area network (LAN)." Click **Next**.
5. Select "I connect through a local area network (LAN)". Click **Next**.
6. Ensure no checkboxes are selected in the "Local area network Internet configuration" window and click **Next**.
7. Select **No** when prompted to set up an Internet mail account and click **Next**.
8. Click **Finish** to exit the wizard.

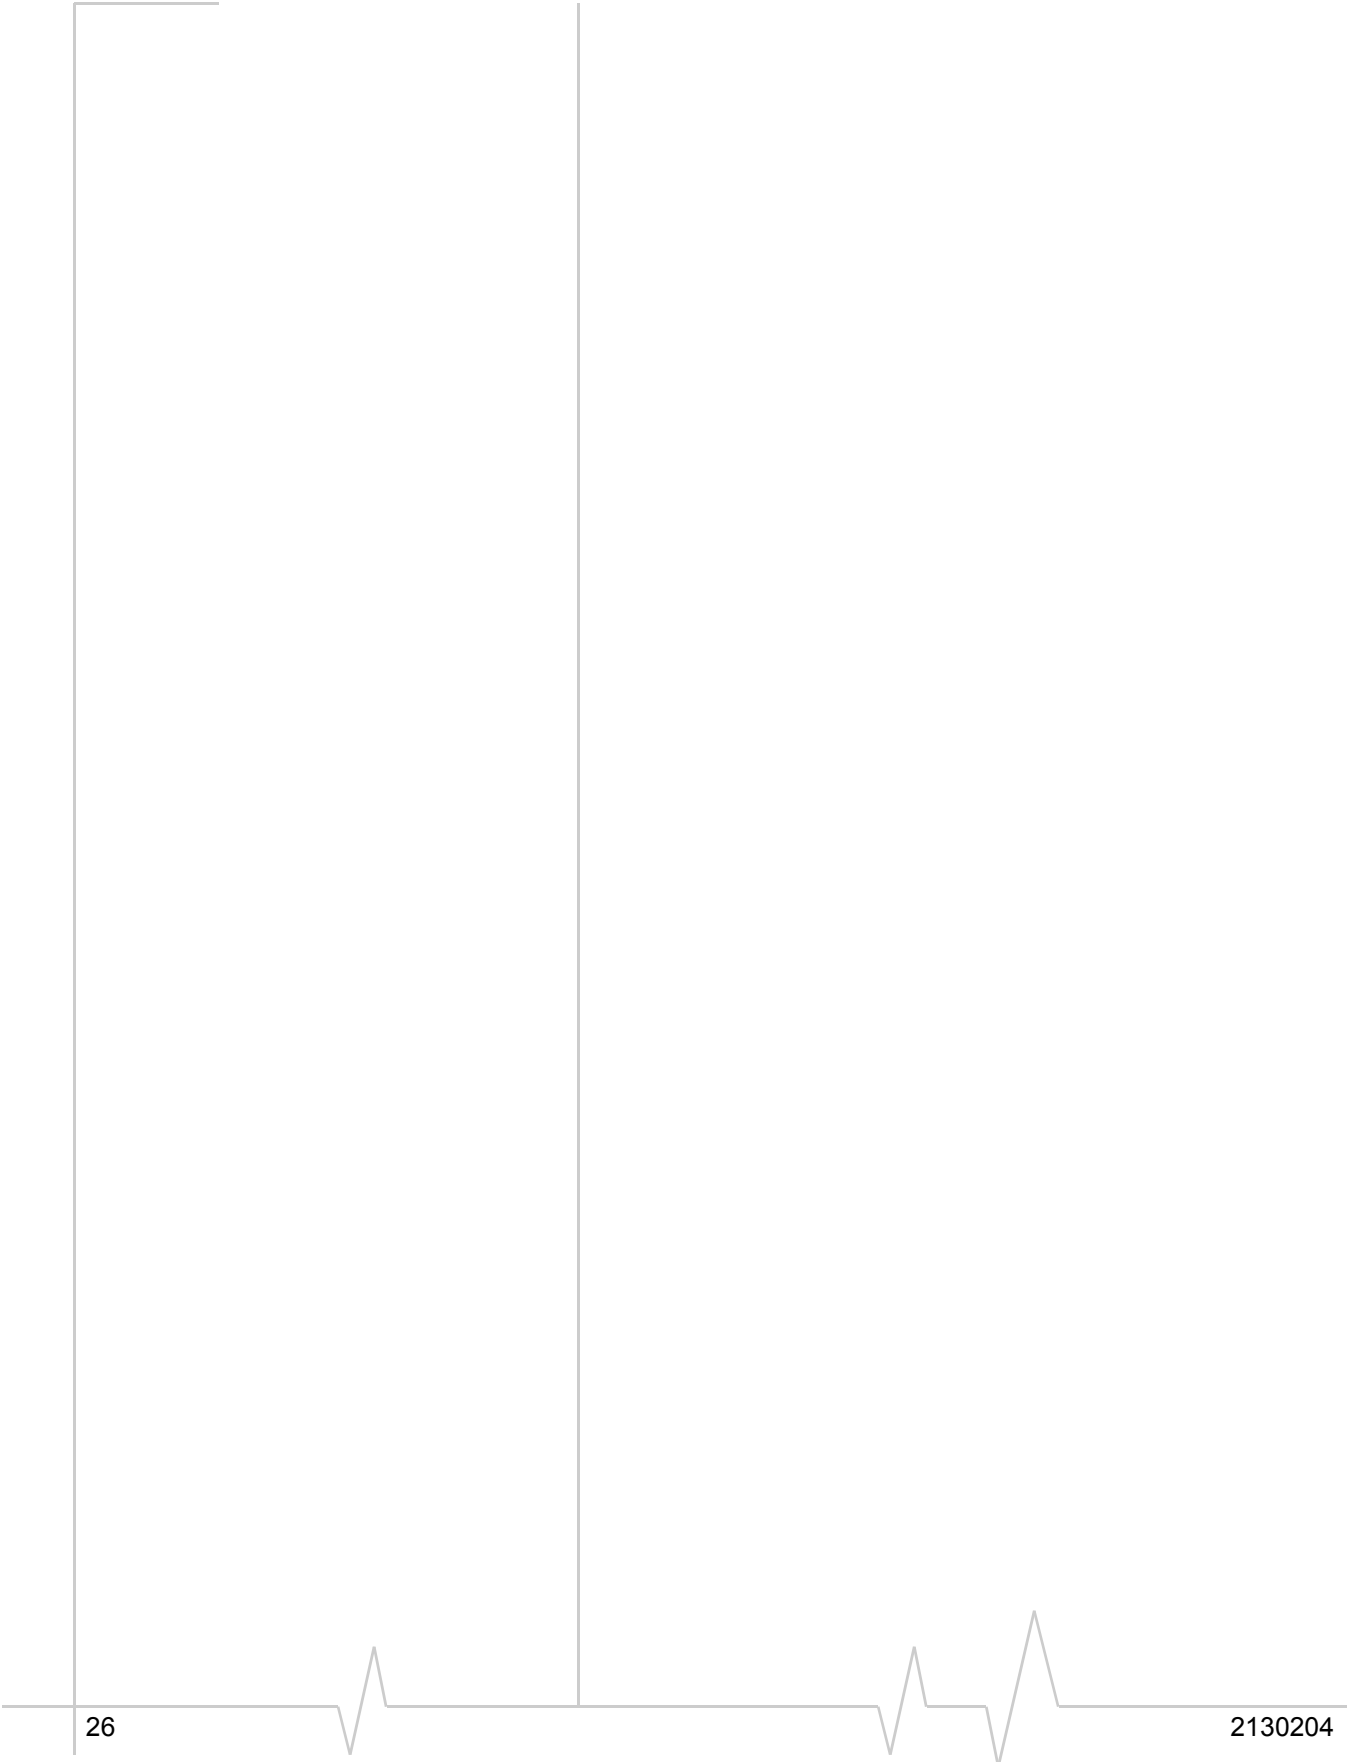

## 4: Installation on Devices Running Windows CE

- System requirements
- Pocket PC and Handheld PC installation
- Windows CE .NET device installation
- Inserting the AirCard into a Pocket PC
- Inserting the AirCard into a Handheld or Tablet PC

This chapter provides installation instructions for users of computers running the Windows CE operating system. The AirCard runs on Handheld, Pocket, and Tablet PCs running Windows CE 3.x and CE .NET. (CE .NET is sometimes called CE 4.x).

Before installing the AirCard software on your CE device, ensure you have the required hardware and software. Since software cannot be directly installed to a CE device, you require a desktop or notebook PC to perform the installation. There are two methods of installation:

- If you are running CE 3.x, you install the software to a desktop or notebook PC that functions as the “host”. The host connects to the CE device by a cable or infrared ports and the software is downloaded from the host to the CE device using the Microsoft ActiveSync® application.
- If you are running CE .NET, you download a CAB file (a compressed file containing the software) from the AirCard installation CD to either a host PC or a flash card. You then copy the CAB file to the CE device by inserting the flash card into your CE device or by establishing an ActiveSync connection between the host and the CE device.

### System requirements

These CE operating systems are supported:

#### Pocket PCs:

- Windows CE 3.0 MS Pocket PC
- Windows CE 3.0 Pocket PC 2002
- Windows CE 4.x Pocket PC 2003

---

*Note: ActiveSync is made by Microsoft and is included with PCs running Windows CE. (It is also available from the Microsoft web site.) ActiveSync 3.5 is supported on Windows 98, 2000, XP, and NT 4.0 with Service Pack 6 or later. ActiveSync 3.7 is supported on Windows 98 SE, 2000, Me, NT, and XP.*

---

#### **Handheld PCs:**

- Windows CE 3.0 Handheld PC 2000

#### **CE .NET devices:**

- Windows CE .NET (Windows CE 4.1 or later)

If you have a Pocket PC and do not know what version of Windows CE you are using, select **Start > Settings**, tap the **System** tab, and tap the **About** icon. The second line on the screen identifies your version of Windows CE as follows:

- **Version 4.20.1081 (Build...)**—your operating systems is Windows CE 4.x Pocket PC 2003
- **Windows 3.0.11171 (Build...)**—your operating systems is Windows CE 3.0 Pocket PC 2002
- **Windows 3.0.9348 (Build...)**—your operating systems is Windows CE 3.0 MS Pocket PC

Your CE device must have:

- 2.6 MB of storage memory
- A PC Card slot or, if you are using a Pocket PC, the PCMCIA jacket accessory (If you are using a jacket with two slots, see the important note on page 34.)

### **ActiveSync installation requirements**

If you are installing using ActiveSync, the host PC (the desktop or notebook PC to which you install the software) must have:

- A CD-ROM drive
- ActiveSync version 3.5 or 3.7 installed.

---

*Note: ActiveSync 3.5 is required if you are using: Windows CE 3.0 MS Pocket PC, or Windows CE 3.0 Pocket PC 2002.*

*ActiveSync 3.7 is required if you are using: Windows CE 4.x Pocket PC 2003, or Windows CE .NET.*

---

You must also have the ability to establish a connection between the CE device and host. This could be:

- An infrared connection (requiring that both the CE device and host have infrared ports).
- A cable connection using either a USB or serial cable (requiring the cable and that the CE device and host have the necessary connectors)

## Flash card installation requirements

---

*Note: This method of installation is only available to users of CE .NET (not including Pocket PC users).*

---

If you are installing using a flash card, you require a flash card with at least 5 MB of available memory. You also require a PC that has both a CD-ROM drive and the appropriate flash card reader (and you must be able to read the flash card on your CE device).

## Pocket PC and Handheld PC installation

Follow these instructions if your operating system is:

- Windows CE 3.0 MS Pocket PC
- Windows CE 3.0 Pocket PC 2002
- Windows CE 4.x Pocket PC 2003
- Windows CE 3.0 Handheld PC 2000

There are two methods of installing and downloading the software using ActiveSync. You can either:

- Connect the host and the CE device before you install the software to the host. (In this case, you are prompted to initiate the download as soon as the software installation is complete.)

*Or*

- Install the software to the host and then connect the host and the CE device, as described here.

This process installs Watcher and the AirCard drivers.

### Installing the software on the host

1. If the AirCard installation CD is not in your CD-ROM drive, insert it. The CD should auto-start and display a menu.
  - If the CD does not auto-start, select **Start > Run** and enter **d:\launch.exe** where **d** is the drive letter of your CD-ROM drive.
2. From the CD start-up menu, select your language preference, and from the next menu, select **Pocket PC and Handheld PC installation**.
3. From the next menu, select the installation option that corresponds to your version of Windows CE.

---

*Note: Do not insert the AirCard into the CE device before downloading the software.*

---

---

*Note: If you are unable to establish a connection, launch ActiveSync from the Start menu and use the online help in ActiveSync.*

---

This launches the installation wizard that installs the software to the host.

4. Use the **Next**, **Back**, and **Finish** buttons to navigate through the wizard.
  - Using the default settings for the Destination Location and Program Folder is recommended unless you have special requirements and an advanced understanding of PC configuration.
  - A dialog box displays this message, "On the next mobile device connection, the installed applications will be downloaded to the device." Click **OK**.
  - Use the **exit** option in the lower right corner of the window to close the CD start-up menu.

#### **Downloading the software to the CE device**

1. Connect the CE device to the host in one of these ways:
  - Connect the CE device and the host PC, using the serial or USB cable provided by the manufacturer of the CE device, or
  - Place your CE device in its cradle and connect the cradle to the host PC using the serial or USB cable provided by the manufacturer of the CE device, or
  - Align the infrared port on your CE device with the infrared port on your host PC

ActiveSync should launch automatically when the host and CE device are connected.

2. If you are prompted to indicate whether you want to set up a partnership, click **Yes** or **No** and click **Next**. (For the purpose of downloading the AirCard software, it does not matter whether you have a partnership.) You should then be prompted that there is software to download.
3. In the Installing Applications window, click **Yes** to start the download. When complete, you are prompted to check your mobile device screen to see if additional steps are required.
4. Click **OK**.
5. Reset your CE device.
  - If your device has a reset button (usually a circular indentation on the bottom of the device, or in the case of Handheld PCs, on the keyboard) press the stylus or pen into the reset button.
  - If there is no reset button, you may need to run a software utility to reset the device. (Consult the

documentation that came with your PC if you do not know how to reset the device.)

## Windows CE .NET device installation

---

*Note: Do not insert the AirCard into the CE device before downloading the software.*

---

To install to a CE .NET device, you must first extract the .CAB file to a host PC, then copy the CAB file to the CE .NET device using ActiveSync or using a flash card.

### Extracting the CAB file to the host

On a notebook or desktop PC:

1. If the AirCard installation CD is not in your CD-ROM drive, insert it. The CD should auto-start and display a menu.
  - If the CD does not auto-start, select **Start > Run** and enter **d:\launch.exe** where **d** is the drive letter of your CD-ROM drive.
2. From the CD start-up menu, select your language preference, and from the next menu, select **CE .NET installation**.
3. From the next menu, select **CE .NET software installation (CAB)**. This opens the installation wizard.
4. Click **Next** to display the license agreement.
5. If you accept the terms of the agreement, click **Yes** to proceed.
6. Click the **Browse** button and select the location in which to place the CAB file. If the CAB file will be copied to the CE device using ActiveSync, select a folder on the host PC. If the CAB file will be copied to the CE device using a flash card, select the drive location of the flash card.
7. Click **Finish** to close the installation wizard, and close the start-up menu using the **Exit** option in the lower right corner of the window.

To complete the installation, follow either the steps in the next section, "ActiveSync installation" or the section that comes after it, "Flash card installation".

### ActiveSync installation

1. Connect the CE device to the host in one of these ways:

---

*Note: If you are unable to establish a connection, launch ActiveSync from the Start menu and use the online help in ActiveSync.*

---

- Connect the CE device and the host PC, using the serial or USB cable provided by the manufacturer of the CE device, or
- Place your CE device in its cradle and connect the cradle to the host PC using the serial or USB cable provided by the manufacturer of the CE device, or
- Align the infrared port on your CE device with the infrared port on your host PC

ActiveSync should launch automatically when the host and CE device are connected.

2. If you are prompted to indicate whether you want to set up a partnership, click **Yes** or **No** and click **Next**. (For the purpose of downloading the CAB file, it does not matter whether you have a partnership.)
3. Select the **Explore** button from the ActiveSync window to open the Mobile Device window.
4. Copy the CAB file from the host to the CE device:
  - Open Windows Explorer, browse to the folder to which you copied the CAB file and drag the file (**AC7X0\_xxx\_CENET.CAB**, where **xxx** is a language abbreviation) to the Mobile Device window.
5. Click **OK** at the file conversion warning.
6. On the CE device (NOT the host), double tap the CAB file.
7. If a warning occurs, indicating that the application is not supported for this device type, click **Yes** to proceed.
8. Tap **OK** to install the software to the Program Files folder.
9. When prompted to do a soft reset, tap **OK** and reset the device:
  - If your device has a reset button (usually a circular indentation on the bottom of the device, or in the case of Handheld PCs, on the keyboard) press the stylus or pen into the reset button.
  - If there is no reset button, you may need to run a software utility to reset the device. (Consult the documentation that came with your PC if you do not know how to reset the device.)

## Flash card installation

1. Insert the flash card into the reader on the CE device.
2. Open Windows Explorer (**Start > Programs > Windows Explorer**) and locate the CAB file that you copied to the flash card (**AC7X0\_xxx\_CENET.CAB**, where **xxx** is a language abbreviation).

3. Copy the CAB file to a folder on the CE device, if you do NOT want to install from the flash card. (The CAB file will be erased during installation.)
4. Double-tap the CAB file to install the software.
5. If a warning occurs, indicating that the application is not supported for this device type, click **Yes** to proceed.
6. Tap **OK** to install the software to the Program Files folder.
7. When prompted to do a soft reset, tap **OK** and reset the device.
  - If your device has a reset button (usually a circular indentation on the bottom of the device, or in the case of Handheld PCs, on the keyboard) press the stylus or pen into the reset button.
  - If there is no reset button, you may need to run a software utility to reset the device. (Consult the documentation that came with your PC if you do not know how to reset the device.)

## Inserting the AirCard into a Pocket PC



To insert the AirCard into a Pocket PC:

1. If the PCMCIA jacket accessory is not already attached, slide the Pocket PC bottom first into the jacket. It should click into place.
2. Ensure the SIM card is inserted into the AirCard (described on page 14).
3. Attach the antenna.

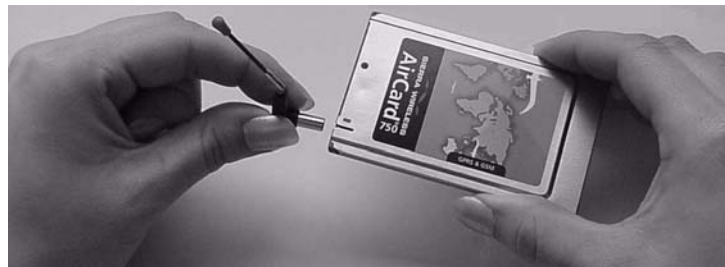


Figure 4-1: Attaching the antenna to the AirCard 750

*Note: The Pocket PC operating system doesn't allow two network devices to be simultaneously inserted into PC Card slots. If you are using a PCMCIA jacket that has two slots, ensure the second slot does not contain another network interface card when you use the AirCard.*

4. With the label facing towards the front of the Pocket PC, insert the network card into the slot at the top of the jacket, as shown in the photo.



Figure 4-2: Inserting the AirCard into a Pocket PC

5. Position the antenna so that it is vertical.

## Inserting the AirCard into a Handheld or Tablet PC

To insert the AirCard into a Handheld or Tablet PC:

1. Ensure the SIM card is inserted into the AirCard (described on page 14).
2. Attach the antenna.



Figure 4-3: Attaching the antenna to the AirCard 750

3. With the label facing towards the top or front of the PC, insert the network card into the slot, as shown in the photo.



Figure 4-4: Inserting the AirCard into a Handheld PC

4. Position the antenna so that it is vertical.
5. If your PC is not plugged into a power supply, the prompt, "Do you want to use this PC card on battery power?" appears. Tap **Yes**.



# 5: Configuring Your Account

- Setting up a profile

---

*Note: Your profile is stored on your AirCard—not on the SIM. This means that if you use your SIM in another device, you must create a profile on that device.*

---

---

*Note: You cannot set up a profile before installing the software. (See page 17 for notebook installation instructions or page 27 for CE device installation instructions.)*

---



Notebook PCs



CE devices

Unless your AirCard was pre-configured, you must set up a user profile before you can use the AirCard. In most cases, one profile is all you require and your service provider should give you all the information you need to set up the profile that will allow you to make a GPRS network connection and access the Internet.

If you want to use the AirCard with a specific application or network that requires settings different from those required to web browse, you may need to set up a separate profile. The AirCard allows you to create up to three profiles.

## Setting up a profile

To create a profile:

1. Insert the SIM into the AirCard if it is not already inserted. (See page 14.)
2. Insert the AirCard into the PC Card slot if it is not already inserted (See page 22 for notebook PCs, page 33 for Pocket PCs, or page 34 for Tablet and Handheld PCs).
3. If Watcher is not running, start Watcher, by selecting **Start > Programs > Sierra Wireless > AirCard 7X0 > AirCard 7X0 Watcher**



or double clicking the desktop shortcut.

Select **Start > Programs > AirCard 7X0 Watcher**

If Watcher detects that no profile has been set up, you are prompted, "Would you like to configure a profile now?" Select **Yes**.

If this prompt does not appear, your AirCard may have been preconfigured, or you may be outside the GPRS coverage area. Select **Tools > Options** to access the Profiles tab of the Options window.

*Note: You must have a valid SIM and be within a GPRS coverage area for Watcher to detect whether you have a profile.*

- If a profile is listed, your AirCard has likely been pre-configured and is ready for use.
- If there is no profile, follow the next set of steps to add one.

4. In the Profiles tab of the Options window, select **Add**. The User Profile window appears.



Figure 5-1: User Profile window (notebooks)



Figure 5-2: User Profile window (Pocket PCs)



Figure 5-3: User Profile window (Tablet and Handheld PCs)

5. Enter your profile information as follows:
  - Profile Name**—enter any name that will help you remember the purpose/use of this account. This name appears in the main Watcher window and, if you later create more profiles, you can use it to select this profile.
  - User Name** and **Password**—enter your username and/or password if assigned by your service provider. (Leave the fields blank if not assigned.)
  - APN (Access Point Name)**— enter the APN (see page 13) that the service provider gave you, if any. (Leave the field blank if no APN was provided).
6. If you want Watcher to automatically establish a GPRS connection when using this profile and whenever you are in GPRS coverage, then select **Auto Connect**.

## The Advanced Profile window

The Advanced Profile window allows you to specify:

- An IP address
- Use of IP header compression
- A DNS address or addresses
- Quality of service parameters (depending on your AirCard configuration)

If your service provider indicated that this information should be entered in your profile, follow the instructions below. Otherwise proceed to the section: See “The Default Profile button” on page 40.

To use the Advanced Profile window:

1. Select the **Advanced** button to open the Advanced Profile window displaying the TCP/IP tab.
2. If your service provider specified an IP address for your AirCard, select “**Use static IP address**”, and enter the address. (“**Use dynamic IP address**” is the default, and, in most cases, should be selected.)
3. If your service provider is using IP header compression, then select the checkbox(es) for the feature(s) that your service provider supports.
4. If your service provider specified a DNS address or addresses, select the **DNS** tab. If one address was provided, enter it in the **Primary DNS** field, and if a second address was provided, enter it in the **Secondary DNS** field.
5. If your service provider specified quality of service parameters, enter these on the **Requested QOS** and **Minimum QOS**

---

*Note: The **Use IP header compression** field should not be checked unless your service provider is using this compression. The AirCard cannot maintain a connection if this is enabled but not supported on the network.*

---

tabs. (These tabs may not be present, depending on your configuration.)

6. Select **OK** to close the Advanced Profile window and **OK** to close the User Profile window.

### The Default Profile button

The “default” profile is the one used to establish GPRS connections if you click Connect without selecting a profile. If you only have one profile, it is the default. If you create more than one profile, you can use the **Default Profile** button to select which is the default.

If the profile is set as the default and is set to auto connect, the AirCard automatically initiates a connection, using this profile, as soon as the AirCard is inserted in the PC Card slot.

Once your profile is complete, click **OK** to exit the Options window. Your AirCard is ready for use.

## 6: Care and Maintenance of Your Network Card

- Stopping and ejecting the AirCard on a notebook PC
- Ejecting the AirCard on a Pocket PC
- Ejecting the AirCard on a Handheld or Tablet PC

---

*Note: Do not insert the AirCard before installing the software. See 'Installation on Notebook PCs' on page 17 or 'Pocket PC and Handheld PC installation' on page 29 for installation instructions.*

---

You can ensure reliable operation and long life of your AirCard by adhering to these guidelines in storage and use:


- Do not apply adhesive labels to the AirCard or SIM. This may cause the AirCard or SIM to become jammed inside the slot, or prevent it from being inserted properly.
- When not installed in your computer, store the AirCard and SIM in a safe place.
- When storing or transporting your PC in a case (such as a notebook case), remove the AirCard antenna and position the computer where the antenna tip cannot be crushed or broken.
- Protect the card from liquids, dust, and excessive heat (see 'Environmental specifications' on page 55 for details).
- The AirCard should fit easily into your computer's PC Card slot. Forcing the AirCard into the slot may damage the connector pins.
- Optimal signal strength is usually obtained when the antenna is pointing straight up. The antenna should bend easily at the hinge. Do not forcefully bend the antenna.



Figure 6-1: Proper positioning of the AirCard antenna



When you insert the AirCard in a notebook PC, the following should happen:

- The PC beeps (unless the effect is disabled).
- The PC Card icon appears in the status area (usually located in the lower right corner of the screen) unless the feature is disabled.
- The Network Adapter Manager icon  for the AirCard also appears in the status area.
- Watcher launches (unless the autolaunch option is disabled).

## Stopping and ejecting the AirCard on a notebook PC

### Windows NT

If you are using Windows NT, your PC must be off whenever you insert or eject the AirCard.

### Windows 95, 98, 2000, Me, XP

To remove the AirCard:

1. Close Watcher if it is open.
2. Click the PC Card icon in the status area to display the option to stop the card.
3. Click “Stop Sierra Wireless AirCard GPRS Adapter Parent” (Windows 95, 98, 2000, or Me) or “Safely remove Sierra Wireless AirCard GPRS Adapter Parent” (Windows XP).
4. If a dialog box appears notifying you that it is safe to remove the card, click **OK**.
5. Push the PC Card eject button on your computer to eject the card.

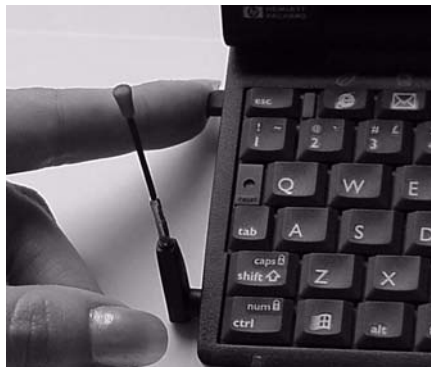


Figure 6-2: Ejecting the AirCard from its slot

6. Grasp the AirCard and remove it from the slot.

## Ejecting the AirCard on a Pocket PC

To remove the AirCard from your Pocket PC:

1. Stop Watcher by selecting **Start > Settings > System tab > Memory > Running Programs**. In the "Running Program List", select "AirCard 7X0 Watcher", then tap **Stop**.
2. Push the PC Card eject button on the Pocket PC to eject the card.
3. Grasp the AirCard and remove it from the slot.



Figure 6-3: Removing the AirCard from its slot (Pocket PC)

## Ejecting the AirCard on a Handheld or Tablet PC

To remove the AirCard from your Handheld PC:

1. Close Watcher.
2. Push the PC Card eject button on your computer to eject the card.



Figure 6-4: Ejecting the AirCard from its slot



## 7: Watcher™ Basics

- Launching Watcher
- The Watcher window
- Icon and indicators on the main Watcher window
- View options (notebook PCs)
- Status icons
- Power options
- Frequency band and network selection

---

*Note: It takes up to 20 seconds for Watcher to become fully functional after launch.*

---

### Notebook PCs:


Watcher is the program you use to manage and monitor your AirCard connections. Watcher allows you to:

- Create an account profile. (This is explained under ‘The SIM Card and Your Account’ on page 13.)
- Determine signal strength, roaming status, GPRS availability, and other network connection parameters
- Monitor the status of the AirCard and GSM service
- Initiate data connections
- Make and receive phone calls
- Send and receive SMS messages
- Enable or disable SIM security that prevents others from using your SIM card if it is lost or stolen
- Set options related to battery power consumption
- Set options related to notifications and the Watcher window

If you set your account profile to autoconnect, you do not need to run Watcher when you use the AirCard, but Watcher does provide useful status information.

## Launching Watcher

On notebook PCs, unless the feature has been disabled, Watcher launches automatically anytime you insert the AirCard. You can also launch Watcher by:

- Double clicking the desktop shortcut, or 
- Selecting **Start > Programs > Sierra Wireless > AirCard 7X0 > AirCard 7X0 Watcher**

### CE Devices

To launch Watcher on a CE device, select **Start > Programs > AirCard 7X0 Watcher**

---

*Note: To get help in Watcher on a notebook or Tablet or Handheld PC, select **Help > Help Topics**. You can also display help by pressing <F1> in most windows.*

---



---

*Note: To get help for Watcher on a Pocket PC, select **Start > Help**.*

---

If the auto-launch browser feature is enabled, anytime you launch Watcher, your browser will open to a specified web page.

## The Watcher window

### Notebook / Handheld /Tablet PCs


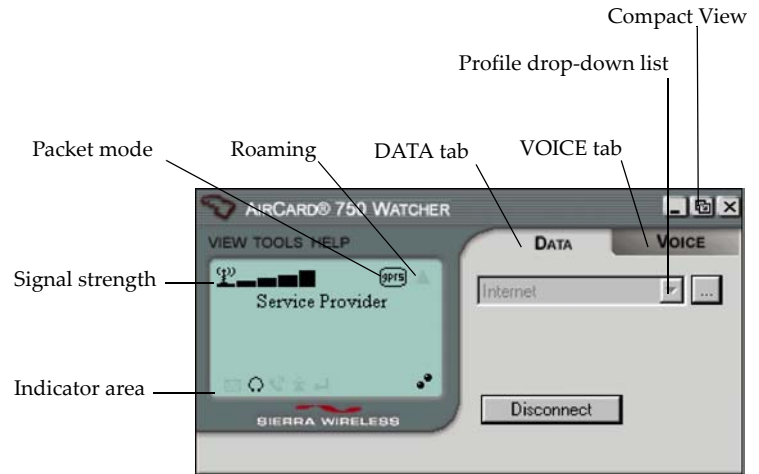


Figure 7-1: The Watcher window (on notebooks, Tablet and Handheld PCs)






### Pocket PCs

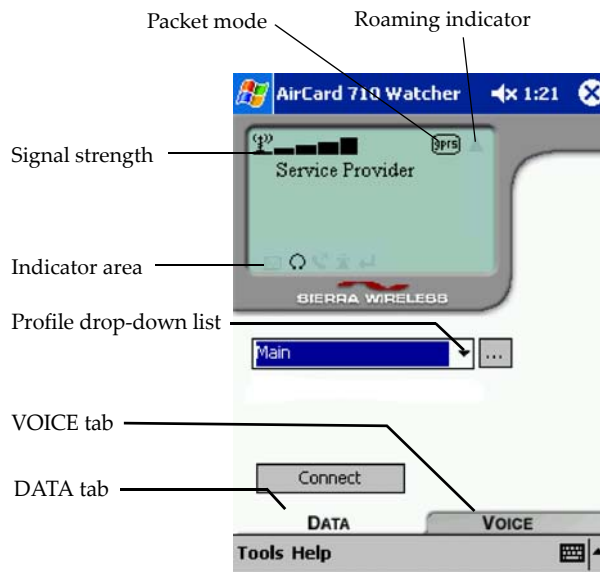








## Icons and indicators on the main Watcher window

These icons are used on the main Watcher window::



**Table 7-1: Icons and indicators in Watcher**

Icon	Meaning
  	<p>The Signal Strength indicator uses bars to show the intensity of the radio signal. The number of bars increases as signal strength increases to a maximum of five bars.</p> <p>When the antenna and bars are dimmed, no connection is possible for one of these reasons:</p> <ul style="list-style-type: none"> <li>• No antenna is attached</li> <li>• You are outside the GSM/GPRS network coverage area</li> <li>• The signal strength is too weak</li> <li>• A network or account problem is preventing the AirCard from obtaining service</li> </ul>
  	<p>A red flashing antenna icon indicates an antenna problem. If this occurs, try reorienting the antenna and ensure that there is nothing on or near the antenna that could be blocking the signal.</p> <p>A red thermometer icon indicates overheating. If this occurs, the AirCard suspends data transmission until the temperature drops, then normal operation is resumed. (This usually takes no more than 10 seconds.)</p>
  <p><b>Depending on your AirCard configuration, you may not have this indicator</b></p>	<p>The GPRS indicator shows whether GPRS is available in this area. You can make data connections only in areas where GPRS is available.</p> <p>can make phone calls and receive SMS messages in areas where there is no GPRS service, provided you are within the GSM coverage area.</p>

**Table 7-1: Icons and indicators in Watcher**

Icon	Meaning
 Depending on your AirCard configuration, you may not have this indicator	<p>The Roaming Status indicator shows whether you are roaming onto the network of a service provider other than your own.</p> <p>When the indicator is off, you are within the local coverage area of your service provider. When the indicator is on, you are roaming.</p> <p>Your coverage area and billing charges depend upon your service provider and the type of account you have. There may be surcharges for roaming service.</p>
	<p>When the SMS message indicator is on, you have one or more unread messages.</p> <p>When the SIM becomes full (and you cannot receive any new messages) the indicator flashes for several seconds and then turns red.</p> <p>You can open the SMS Message window by double clicking (notebook PCs) or tapping (Handheld/Pocket PCs) the icon.</p>
	<p>When this indicator is on, a headset is attached.</p>
	<p>When this indicator is on, there is an incoming call.</p>
	<p>When the missed call indicator is on, you received one or more calls that you failed to answer. You can view the missed calls in the call log.</p>
 <b>AirCard 750 Only</b>	<p>When this indicator is on, call forwarding is enabled. (This icon is only shown if all calls are being forwarded.)</p>
 <b>AirCard 750 Only</b>	<p>When this indicator is on, you have unheard voice mail. You can connect to your voice mail by selecting this indicator. The phone number for your voice mail is shown on the My Numbers tab of the Options window.</p>


**Table 7-1: Icons and indicators in Watcher**

Icon	Meaning
	When this indicator is on and neither circle is shaded, you have a connection but no data transmission is occurring.
	A shaded top circle indicates that data is being sent and a shaded bottom circle that data is being received.

## View options (notebook PCs)

On notebook PCs, you have these options concerning the Watcher window:

- You can enable/disable always on top from the VIEW menu. When enabled, the Watcher window always appears in front of other application windows.
- You can switch between the full Watcher window and the compact window from the VIEW menu or by using the Compact View button:

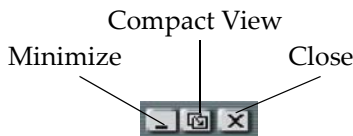

- You can use the Minimize button to close the Watcher window but leave the program running.

You can also control where the Watcher window appears when launched.




- If you enable the **Restore Previous Position On Startup** option, Watcher opens in the same place you close it. Otherwise, Watcher opens in the center of the screen.
- If you enable **Remember Compact View Position** option, the compact Watcher window opens in the last place you closed it.

These options and the autolaunch feature (that causes Watcher to open automatically when you insert the AirCard) are enabled and disabled on the Display tab of the Options window (TOOLS > Options).

## Status Icons

These icons appear in the status area (usually in the lower right corner of your screen) on notebook, Tablet, and Handheld PCs, and on the lower right corner of the Today page on Pocket PCs.

**Table 7-2: Status Icons**

Icon	Meaning
	You have a GPRS connection.
	You do not have a GPRS connection.
	You have one or more unread SMS messages.

## Power Options

The AirCard draws power from your PC's battery. There are two features of the AirCard that allow you to manage battery power consumption:

- The power down/power up option
- The transmit power consumption option

### Power Down and Up

The power down/power up option allows you to conserve your battery by powering the AirCard down when you're not using it.

To power down the AirCard:

1. Select **Tools > Power Down**

When powered down, the menu option switches to Power Up and the message, "Device powered down" is displayed on the Watcher window.

You cannot maintain a connection when the AirCard is powered down.

---

*Note: If you are using the AirCard in a CE device, it is recommended that you set the Transmit Power Consumption to low.*

---

## Transmit power consumption

The Transmit Power Consumption option allows you to choose between maximizing your data transmission speed or minimizing battery drain on your PC. The settings for this option are:

- Normal (Notebook)
- Medium
- Low (PDA)

If you select **Normal (Notebook)**, the AirCard takes advantage of certain network resources (if they are available) to maximize the upload transmission speed. This increases peak battery consumption slightly but unless you are using a CE device, the increase has little effect. (The maximum possible data transmission speed with this setting is 56 kbps).

If you select **Low (PDA)**, the AirCard makes no attempt to take advantage of faster upload speeds that might be possible on some networks. This minimizes peak battery consumption and is the recommended setting for CE devices because they are unable to meet the peak power demands of the AirCard while operating at the highest upload transmission speeds. (The maximum possible data transmission speed with this setting is 14.4 kbps).

The **Medium** setting has a maximum possible data transmission speed of 28.8 kbps.

The change in data transmission speed or peak battery consumption that results from changing these settings is dependent on network conditions (such as the number of users in your area), and in some circumstances, may not be noticeable.

This setting does not affect the speed of downloads (data transmissions from the network to the AirCard).

## Frequency band and network selection

Watcher has two options that affect your ability to obtain GPRS service in any given area. You can select:

- The frequency band you want to use
- The network you want to use, if you are within the coverage area of more than one network

## Frequency band selection

The AirCard 750 operates on the 900, 1800, and 1900 MHz bands. (See ‘Supported GSM frequency bands’ on page 10 for more information about frequency bands.) Generally, you need to select the 1900 MHz band in North America and the 900/1800 MHz bands outside of North America. This option is set on the Network tab of the Options window (TOOLS > Options).

## Network selection

Depending on your location, you may be within the coverage area of several networks. Your ability to obtain service on each network is dependent on your account.

Your options for network selection are:

- **automatic**—the AirCard automatically selects a network based on your account and network availability.
- **manual**—the AirCard scans the area and displays a list of detected GSM networks. You can then choose from a list of available networks.

If you select a network on which you cannot obtain service, the message, “Failed to register with network” appears. You should then choose a different network.

This option is set on the Network tab of the Options window (TOOLS > Options).

## 8: Technical Specifications

- LED operation
- Radio frequency and electrical specifications
- Environmental specifications
- Sending GSM commands to the network

This chapter describes the operation of the LED and provides technical data for the AirCard 750 wireless network card.

### LED operation

The AirCard has a single LED<sup>1</sup> located on the antenna end of the card beneath the SIM slot. The color (red, green or amber) and state (off, on solid, or blinking) of the LED indicate the connection status as follows:

**Table 8-1: LED operation**

LED state	How to interpret
<b>Solid amber<sup>a</sup></b>	The AirCard is powering up, or a firmware download is in progress.
<b>Blinking amber</b>	The AirCard is scanning for service.
<b>Blinking green</b>	The AirCard is in service and registered on the network.
<b>Solid green</b>	A voice call is in progress.
<b>Blinking red</b>	There is a hardware problem.
<b>Off</b>	The AirCard is powered down.

- a. The LED is red/green. The amber color occurs when both red and green are lit.

---

1. LED—light emitting diode

## Radio frequency and electrical specifications


**Table 8-2: Radio frequency & electrical specifications**

<b>Approvals</b>	FCC Parts 15, and 24 Industry Canada CE
<b>Compliance</b>	Compliant with: GPRS GSM Release 97 SMG 31 Phase 2+
<b>Voltage</b>	+5 VDC from PCMCIA Slot
<b>Current</b>	<i>Typical requirement GSM Band:</i> 4 TX slots on 1.0 A peak, 0.70 A average 2 TX slots on 0.8 A peak, 0.40 A average 1 TX slots on 0.75 A peak, 0.30 A average <i>Typical requirement PCS/DCS Band:</i> 4 TX slots on 0.9 A peak, 0.60 A average 2 TX slots on 0.7 A peak, 0.35 A average 1 TX slots on 0.65 A peak, 0.25 A average Standby: Handhelds: 12 mA Notebooks: 16 mA
<b>Multi-slot class</b>	<b>Class 12</b>
<b>Transmit</b>	<b>AirCard 750:</b> <i>PCS:</i> 1850 to 1910 MHz <i>DCS1800:</i> 1710 to 1785 MHz <i>EGSM900:</i> 880 to 915 MHz
<b>Receive</b>	<b>AirCard 750:</b> <i>PCS:</i> 1930 to 1990 MHz <i>DCS1800:</i> 1805 to 1880 MHz <i>EGSM900:</i> 925 to 960 MHz
<b>Channel spacing</b>	200 kHz
<b>Frequency stability</b>	0.1 ppm

## Environmental specifications

**Table 8-3: Environmental specifications**

<b>Operating temperature</b>	-20 to +60 °C (ambient, outside PCMCIA enclosure)
<b>Storage temperature</b>	-30 to +85 °C
<b>Humidity</b>	95%, non-condensing
<b>Vibration</b>	15 g peak 10 to 2000 Hz (non-operating)

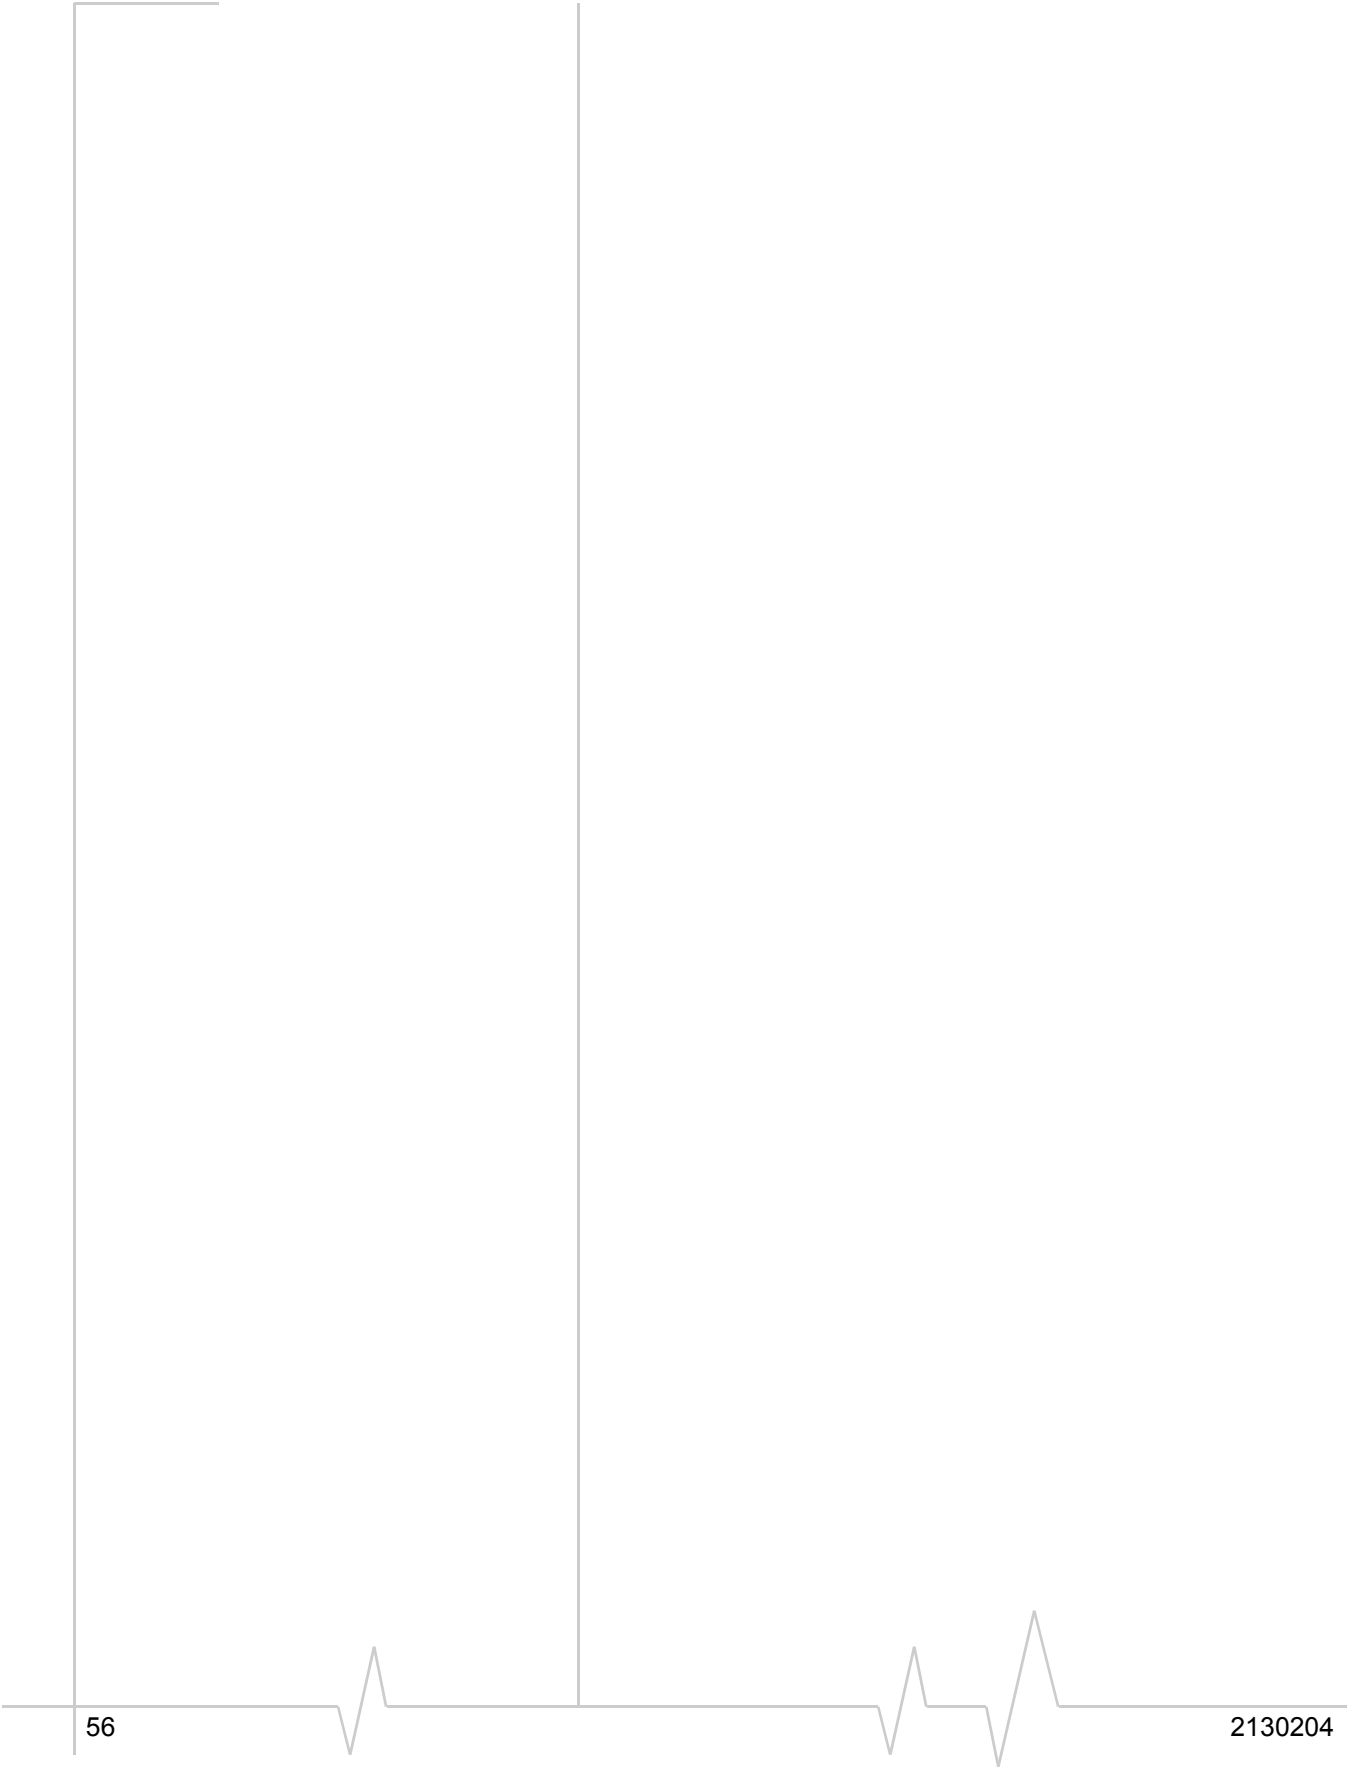

## 9: AirCard 750 Regulatory Information

- CE approval (European Union)
- Industry Canada approval
- Singapore IDA safety notices
- FCC approval (US)



### CE approval (European Union)

The AirCard 750 is certified to be used in the member states of the EU.

### Declaration of conformity for CE Marking

We,

*Sierra Wireless, Inc.*

13811 Wireless Way  
Richmond, BC  
Canada V6V 3A4

declare under our sole responsibility that the product *AirCard 750*, to which this declaration relates, is in conformity with the following standard(s) or other normative document(s):

- R&TTE 1999/EEC
  - EN 301 511; V7.0.1
  - EN 301 489-7 (9-2000)
  - EN 60950:2000
  - EC Recommendation 1999/519/EC

A handwritten signature in black ink, appearing to read 'Steve Blaine'.

Steve Blaine

Vice President of Engineering

February 26, 2003

## Industry Canada approval

WARNING (EMI) – Canada – This digital apparatus does not exceed the Class B limits for radio noise emissions from digital apparatus as set out in the interference causing equipment standard entitled “Digital Apparatus”, ICES-003 of the Department of Communications.

Cet appareil numérique respecte les limites de bruits radioélectriques applicables aux appareils numériques de Classe B prescrites dans la norme sur le matériel brouilleur: “Appareils Numériques”, NMB-003 édictée par le ministre des Communications.

Industry Canada: 2417C11897

## Singapore IDA Safety Notices

### Aircraft Safety

Switch off your AirCard 750 when in an aircraft. The use of cellular equipment in an aircraft may be dangerous to the operation of the aircraft, disrupt the cellular network and is illegal. Failure to observe this instruction may lead to suspension or denial of cellular telephone services to the offender, or legal action or both.

### Explosive Atmospheres

- Users are advised not to use the equipment when at a refuelling point.
- Users are reminded of the need to observe restrictions on the use of radio equipment in fuel depots, chemical plants or where blasting operations are in progress.

### Road Safety

Users are advised to use only a fixed, neck slung, or clipped-on microphone when using the AirCard as a phone while operating a vehicle, except in an emergency.

## Non-Ionising Radiations

As with other mobile radio transmitting equipment, users are advised that for satisfactory operation of the equipment and for the safety of personnel, it is recommended that no part of the human body be allowed to come too close to the antenna during operation of the equipment.

## FCC approval (US)

Tested to comply with FCC standards  
FOR HOME OR OFFICE USE.

This device complies with Part 15 of the FCC Rules. Operation is subject to the condition that this device does not cause harmful interference.

**CAUTION** When the AirCard 750 is in use, users should maintain a distance of at least 25 mm (1") between the antenna and the user's torso, head, or legs. This device has been tested for compliance with FCC RF exposure limits in three typical laptop computers and three PDAs<sup>1</sup>. This device is only authorized to be used in laptop computers or PDAs that are identical or substantially similar to those in the grant application.

FCC ID: N7NAC750

Where appropriate, the use of the equipment is subject to the following conditions:

**CAUTION** Unauthorized modifications or changes not expressly approved by Sierra Wireless, Inc. could void compliance with regulatory rules, and thereby your authority to use this equipment.

**WARNING (EMI) – United States FCC Information** – This equipment has been tested and found to comply with the limits pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in an appropriate installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communication. However, there is no guarantee that interference will not occur in a particular installation.

---

1. PDAs are sometimes referred to as Pocket PCs or Palmtop Computers.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help

If you have purchased this product under a United States Government contract, it shall be subject to restrictions as set forth in subparagraph (c)(1)(ii) of Defense Federal Acquisitions Regulations (DFARs) Section 252.227-7013 for Department of Defense contracts, and as set forth in Federal Acquisitions Regulations (FARs) Section 52.227-19 for civilian agency contracts or any successor regulations. If further government regulations apply, it is your responsibility to ensure compliance with such regulations.

# »» | Index

## Numerics

1800 MHz band 10  
1900 MHz band 10  
900 MHz band 10

## A

Access Point Name (APN) 13, 39  
account 10  
administrative privileges 18, 19, 21  
aircraft, using the AirCard in 1  
"always on" connection 9  
antenna 12  
APN (Access Point Name) 13, 39  
approvals 54  
Auto Connect 39

## C

care and maintenance 41  
CD contents 12  
CE  
    certification 57  
    declaration of conformity for CE marking 57  
CE devices  
    installing the software 29–33  
    system requirements 27  
class, multi-slot 54  
Communication Failed 24  
compact view 49  
configuring a profile 37–40  
copyright information 3  
coverage area 10

## D

declaration of conformity for CE marking 57  
destination location  
    Handheld/Pocket PCs 30  
    notebook PCs (Windows 95, 98, 2000, Me) 18  
    notebook PCs (Windows NT) 21  
    notebook PCs (Windows XP) 20  
DNS 13  
    primary 39  
    secondary 39  
driver (AirCard) 11, 19, 20, 21

## E

ejecting a SIM card 14

ejecting the AirCard 42–43  
electrical specifications 54  
EMI warning 59  
environmental specifications 55

## F

FCC ID 59  
FCC RF exposure information 1  
frequencies  
    receive 54  
    transmit 54  
frequency bands 10  
    selection 51

## G

GPRS 9  
    indicator 47  
GSM networks supported 10  
GSM wireless networks supported 10

## H

Handheld PC  
    inserting the AirCard 34  
    installing the software 29–33  
    removing the AirCard 43  
    system requirements 27  
    Watcher window 46  
hazards 1  
headset 12  
humidity 55

## I

I/O space (input/output space) 17  
IMEI 13  
Industry Canada # 58  
inserting a SIM card 14  
inserting the AirCard  
    Handheld PC 34  
    Pocket PC 33  
    Tablet PC 34  
    Windows 95, 98, 2000, Me 18  
    Windows NT 22  
    Windows XP 20  
installation  
    Handheld/Pocket PCs 27–35  
    notebook PCs 17–24  
    *See also* software installation  
Internet Explorer

- setting to use the AirCard 24
- IP address 39
- IP header compression 39
- IRQ (interrupt request) 17

## L

- LED operation 53
- liability, limitation of 2

## M

- maintenance 41
- memory required 17
- multi-slot class 54

## N

- network 9, 10
- networks supported 9
- notebook PC
  - installing the software 18–24
  - removing the AirCard 42–43
  - system requirements 17
  - Watcher window 46
- notebook PC *See also* Windows.

## O

- online help
  - Handheld PCs 46
  - notebook PCs 46
  - Pocket PCs 46
- operating systems supported 9

## P

- package contents 12
- password (service provider) 39
- patents 2
- PC Card slots required 17
- PCS frequency band 10
- platforms supported 9
- Pocket PC
  - inserting the AirCard 33
  - installing the software 29–33
  - removing the AirCard 43
  - system requirements 27
  - Watcher screen 46
- Power 50
- power options
  - power up/down 50
- primary DNS 39
- profile
  - configuring 37–40
- Profile Name 39
- program folder

- Handheld/Pocket PCs 30
- notebook PCs (Windows 95, 98, 2000, Me) 18
- notebook PCs (Windows NT) 21
- notebook PCs (Windows XP) 20

## R

- radio frequency specifications 54
- receive frequencies 54
- regulatory information
  - AirCard 750 57–60
- removing a SIM card 14
- removing the AirCard 42–43
  - Handheld PCs 43
  - Pocket PC 43
  - Tablet PCs 43
  - Windows 95, 98, 2000, Me, XP 42
  - Windows NT 42
- RF exposure information 1
- RF specifications 54
- roaming 11
  - indicator 48

## S

- safety and hazards 1
- secondary DNS 39
- service pack 21
- signal strength 47
- SIM card
  - inserting 14
  - removing 14
- SMS messages
  - indicator 48
- software
  - See* Watcher.
- software installation
  - Handheld/Pocket/Tablet PCs 29–33
  - notebook PCs
    - Windows 95, 98, 2000, Me 18–19
    - Windows NT 21–24
    - Windows XP 19–21
- specifications 53–55
  - electrical 54
  - environmental 55
  - radio frequency 54
- starting Watcher 45
- storage
  - temperature 55
  - when not using AirCard 41
- system requirements
  - Handheld/Pocket/Tablet PCs 27
  - notebook PCs 17

## T

- Tablet PC
  - inserting the AirCard 34

- installing the software 29–33
  - removing the AirCard 43
  - system requirements 27
  - Watcher window 46
- TCP/IP 18
- technical specifications 53–55
- temperature 55
- trademarks 3
- transmit frequencies 54
- tri-band 10
- Type II PC card 9
- U**
- User Name 39
- V**
- vibration 55
- W**
- warning
  - EMI 59
  - safety and hazards 1
- Watcher 45–52
  - screen areas
    - notebook PCs 46
    - Pocket PCs 46
  - starting 45
  - window position 49
- Watcher screen areas
  - Handheld /Tablet PCs 46
- Windows
  - operating systems supported 9
- Windows 2000
  - as a supported operating system
    - service pack 17
  - inserting the AirCard 18
  - installation 18–19
  - removing the AirCard 42
- Windows 95
  - as a supported operating system 17
  - inserting the AirCard 18
  - installation 18–19
  - removing the AirCard 42
- Windows 98
  - as a supported operating system 17
  - inserting the AirCard 18
  - installation 18–19
  - removing the AirCard 42
- Windows Me
  - as a supported operating system 17
  - inserting the AirCard 18
  - installation 18–19
  - removing the AirCard 42
- Windows NT
  - as a supported operating system 17
  - changing the interrupt 24
  - inserting the AirCard 22
  - installation 21–24
  - removing the AirCard 42
- Windows XP
  - as a supported operating system 17
  - inserting the AirCard 20
  - installation 19–21
  - removing the AirCard 42
- Winsock 18
- wireless networks supported 9





