

User Guide for the Kyocera Passport PC Card



Kyocera Wireless Corp.
10300 Campus Point Drive
San Diego, California 92121 USA
www.kyocera-wireless.com

Contents

Passport Basics	1
Checklist	1
About this guide	1
CDMA coverage and roaming	1
Passport Software	1
Account Activation	2
Power Management	2
Other Features and Benefits	2
Care and maintenance	2
Installation	3
System Requirements	3
Setup Instructions	3
Removing Passport from the PC.....	4
Connecting to Passport Navigator	5
Connecting	5
Understanding Navigator	6
Regulatory and Safety Information	8
Regulatory Notices	8
Safety Information	9
Consumer Limited Warranty	10

Passport Basics

Congratulations and thank you for purchasing the Kyocera Passport PC Card.

Passport is a dual-band 1X EVDO PC card that enables you to communicate wirelessly from your laptop at high speeds on CDMA networks with all the benefits of CDMA technology. The modem offers 2G data transmission at 14.4 kilobits per second (Kbps); and 3G data transmission for 1X RTT at up to 143 Kbps, and 1XEVD0 at up to 2.4 Mbps.

With the modem installed in your PC, you can send and receive email messages, explore the Internet, access your corporate network, or use various software applications remotely.

Passport works in any notebook running Windows 2000® or Windows XP® that has a standard Type II PC Card slot.

 **Important:** Do not insert Passport in to a PC Card slot until you have installed the Passport Navigator software

Checklist

The following items are included in your kit:

- The Passport Wireless PC Card Modem
- KWC Installation CD, which contains the software and the complete user guide
- Quick reference guide

About this guide

This user guide contains all the information you need to properly install and use Passport. Before you can begin using Passport, it is essential that you follow the proper instructions for installation. You must first load the software provided on the CD-ROM included in the kit before you insert Passport PC card into your notebook PC. This initial setup process takes just a few minutes. An overview of the steps detailed in the “Setup Instructions” on page 3 follow:

- Load the software, located on the Installation CD.
- Insert Passport into your notebook’s PC card slot when prompted and complete the installation.
- Connect to the Passport Navigator.

CDMA coverage and roaming

Passport operates on CDMA networks and can only be used where CDMA coverage is available. The companies that offer service on these networks are called wireless service providers. Every wireless service provider has a different coverage area and most wireless service providers post coverage maps on their web sites. You require an account with a CDMA wireless service provider to use Passport.

Most CDMA service providers have roaming agreements that allow you to use your modem on other wireless service provider’s networks. When you use your modem on a network other than the one operated by your wireless service provider, you are “roaming” and you may be billed at a higher rate.

Passport Software

Passport comes with an application called Navigator, as well as modem drivers for each of the supported operating systems. (A driver is the software that forms the interface between your operating system and the modem.) Before you can use your modem, you must install the software from the CD-ROM that was included with your PC card.

Account Activation

To use Passport, the card must be activated. Activation is the process of configuring your modem to use your account. Depending on how you purchased your modem, it may have been pre-activated. If the modem has not been pre-activated, when you insert the modem for the first time, the Activation Wizard will launch automatically. The wizard will guide you through the activation process.

Power Management

Passport is designed to take advantage of the power management and system overhead benefits offered by the standard 32-bit CardBus electrical interface that minimizes power consumption.

Other Features and Benefits

- A Type II PCMCIA format supporting the CardBus I/O interface
- Supports North American PCS (1900 MHz) and Cellular (800 MHz) bands
- Based on the QUALCOMM MSM6500 chipset
- Supports 2G and 3G network technologies
- Equipped with all necessary host software and drivers for various operating systems
- Works at lower battery voltage and operates at a greater speed than standard PC Card interface.
- Memory (FLASH/RAM): 128/64 MB
- 32-bit Cardbus interface
- Integrated dual band main antenna and a dual-band chip-based diversity antenna
- Supports external accessory antenna for enhanced diversity performance
- LED service indicator
- Supports 2-way Short Message Service (SMS)
- External accessory antenna for enhanced performance

Care and maintenance

- When not in use, fold the antenna down and store where the card can be protected from being crushed or broken.
- Store your Passport in a dry and clean place. Storage temperature: -30° to 65°C [86° to 149°F].
- Do not apply adhesive labels to Passport. This may cause the card to jam inside the PC card slot of your PC.
- The antenna extends freely. Do not force or hyper-extend the antenna. This may cause it to break.
- Passport easily fits into the PC card slot. Forcing Passport into the PC card slot may cause considerable damage.
- Protect your card from liquids, dust and excessive heat.
- Optimal signal strength is usually obtained when the antenna is perpendicular to the modem. The antenna should bend easily at the hinge. Do not forcefully bend the antenna.

Installation

Warning: DO NOT insert the Passport PC card before you install the software onto your notebook PC. Once you install the software and drivers you will be prompted to insert Passport into the Type II PC Card slot.



Once the card is inserted, do **not** physically remove Passport from the PC Card slot until you have completed the **Unplug/Eject** process. Removing the card improperly may cause a fatal error to your PC. See “Removing Passport from the PC” on page 4.

System Requirements

Your Passport functions in notebook PCs with these Windows[®] operating systems:

Windows[®] 2000

Windows[®] XP

To install Passport and the software, these minimum system resources are required:

Card slots: Type II PC Card slot (CardBus)

Disk Drive: CD-ROM

Memory: 32 MB

Disk Space: 14 MB

Processor: Pentium 166 MHz or higher

Dial Up Networking: DUN bound to TCP/IP

Setup Instructions



Important: Install the software before you insert the Passport PC Card into the computer for the first time. Only after the software has been installed can Windows successfully detect and configure the PC card.

1. Close any Windows programs that are running and insert the CD that came with Passport into your CD-ROM drive. Setup should start automatically.

Note: If the program does not launch automatically, select **Start** → **Run...** from the taskbar, Enter **D:Setup.exe** (where D is the letter of your CD-ROM drive) and click **OK** to launch the installation wizard.

2. Select a language from the dropdown menu and click **OK**.
3. Click **Next** to begin installing Passport components onto your computer.
4. Read the License Agreement, select “**I accept the agreement**”, and click **Next**.
5. Select a destination folder for your files, or use the default location and click **Next**.
6. Select a location for the program shortcuts, or use the default provided. Click **Next**.
7. Place a checkmark in the **Create a desktop icon** box and click **Next**.
8. Click **Install**.
9. Place a checkmark next to the **Launch Setup Wizard** box and click **Finish**. Passport Navigator launches the setup window that will recognize your PC card.

10. At the prompt, **Waiting for PC Card to be inserted**, insert your Passport PC card into your notebook's PC card slot with the label facing up. Raise the antenna so that it is fully extended and pointed up at a 90° angle. Use in any other configuration may exceed FCC RF exposure limits. Recognition of your card could take a few minutes while your computer recognizes the new software drivers that were installed in the previous steps.

11. When the software detects your PC card **Press next to continue** appears on the screen. Click **Next**.

12. Enter a username and password in the text field for the connection you want.
3G: For 1X RTT, with data transmission of up to 143 Kbps; and 1XEVD0, with data transmission of up to 2.4 Mbps. The Dial number is hard-coded into the software (#777) for 3G connections.

2G: For IS95, with data transmission of 14.4 kbps only The #778 dial number is coded in software but you may change this number.

Click **Next** to complete the installation.

Note: You can change your username and password at any time. See “Configuration Tab” on page 7.


13. Click **Finish** to exit setup and launch Passport Navigator.



Removing Passport from the PC

Warning: Do not eject Passport from your notebook until you have followed the Unplug/Eject Hardware instructions for proper removal. Removing the card improperly may cause a fatal error on your PC.

1. Double-click on the **Unplug/Eject Hardware** icon in the system tray.

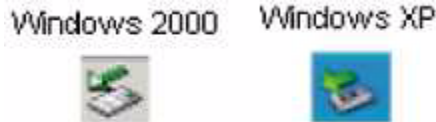

2. Select the correct option for your operating system from the **Unplug or Eject Hardware** window and click **Stop**.


Windows 2000: Select **NEC PCI to USB Open Host Controller**.

Windows XP: Select **NEC PCI to USB Open Host Controller**.

3. Confirm the device to be stopped and click **OK**.


4. A Safe to Remove Hardware message appears, click **Close**.

5. Remove the Passport PC card from your notebook. When removing Passport, always grip it by the sides of the card rather than from the top. Pulling on the antenna over time may damage the card. If available, use the Card Ejector tool on your laptop.

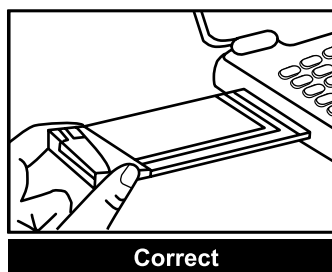

Correct

When inserting and removing the PC Card, grip both sides.

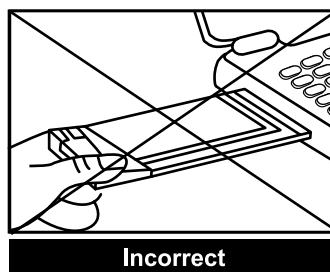

Incorrect

Do not handle or remove the PC Card by pulling on the antenna.

Connecting to Passport Navigator

Connecting

Navigator manages the modem's connections, which is your passport to the internet. Use Navigator to connect to the internet, to check status, and to obtain information on your card and connection.

1. Insert your Passport PC card into the PC slot.



2. Double-click on the Passport Navigator icon on your desktop.

-or-

Select the **Start** → **Programs** → **Kyocera Passport Navigator** → **Passport Navigator**.

3. Select the speed at which you want to connect (3G or 2G) and click the **Connect** button. Note that this button switches between “Connect” (when you are disconnected) and “Disconnect” (when you are no longer connected).
4. Click the **Exit** button to close Passport Navigator before you perform the **Eject/Unplug** routine to remove your PC card. See “Removing Passport from the PC” on page 4.


Note: Use the minimize button to reduce the screen size to an icon that appears in your taskbar. Double-click on the icon to create the full-size screen again.

Understanding Navigator

Connect Tab

The **Connect** tab on Navigator contains information on:

- Status of connection and transmission
- Duration of each individual call. It is not cumulative.
- Network you're connected on.
- Signal Strength is indicated by the numbers of bars highlighted in the Signal Strength field on the Navigator screen. The more bars, the better the signal. There are three main reasons why you might experience inadequate signal strength.
 1. You may be outside of the CDMA network coverage area. See your wireless service provider for coverage maps.
 2. Your antenna is not completely extended or is pointed in the wrong direction. You may be able to improve the signal strength by reorienting the antenna.
 3. You may be inside a building or near a structure that is blocking the signal. If this is the case, you may be able to improve the signal strength by changing the position or location of your PC.
- Network Configuration has two choices for connection speed:
 - 3G for 1XEVD0 and 1X RTT connections
 - 2G for IS95 connections which have a maximum connection speed of 14.4kpbs.

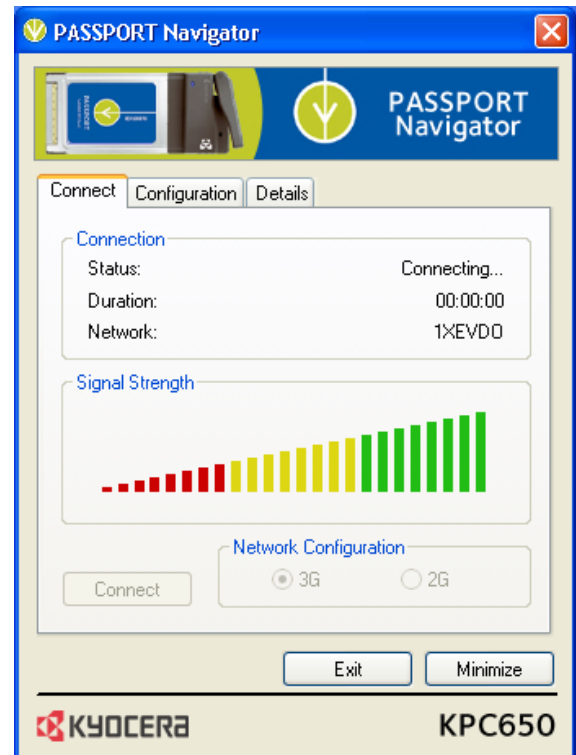


Configuration Tab

The **Configuration** tab contains the user names, passwords, and dial numbers for the 3G and 2G dialing options.

The 3G dial number is hard-coded into the software and cannot be changed. However, for 2G connections, you may change the dial number.

You may change these user names and passwords at any time.


Always click **Save** after changing your entries.

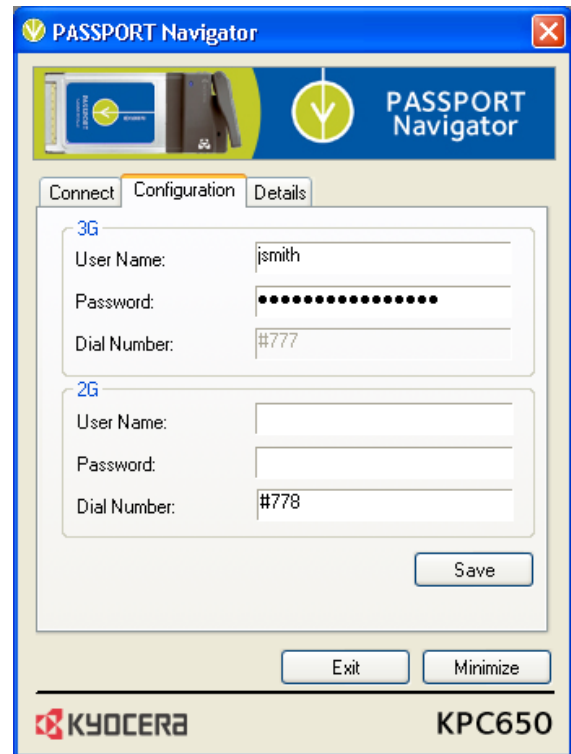

Details Tab

The **Details** tab contains specific information on:

- Manufacturer of your PC card
- Model of your PC card
- Firmware Version installed on your PC card.
- ESN in both decimal and hexadecimal format
- Phone Number of your PC card

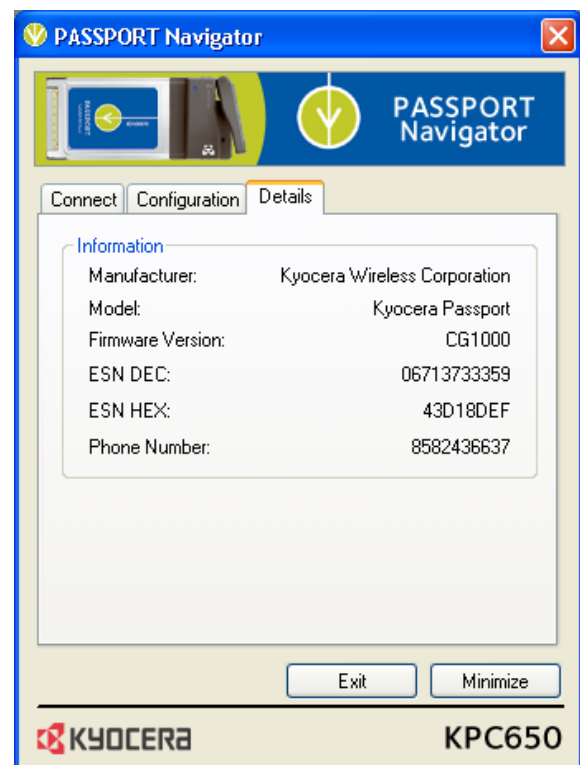

Regulatory and Safety Information

This Section outlines important regulatory notices concerning your new KPC650 PC card.

FCC ID:OVFKWC-KPC650, IC:3572A-KPC650

Regulatory Notices

FCC/IC Notice:

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

Caution: The user is cautioned that changes or modifications not expressly approved by the party responsible for compliance could void the warranty and users' authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures.

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: This device has been tested for compliance with FCC RF exposure limits in the laptop computers configurations with side PCMCIA slot, and can be used in laptop computers with substantially similar physical dimensions, construction, and electrical and RF characteristics. Always place the antenna in the upright position (oriented vertically) when using this data modem in a notebook computer. This PC card must not be co-location or operated in conjunction with any other antenna or transmitter. Use of this device in any other configuration may exceed the FCC RF Exposure compliance limit.

If you have purchased this product under a United States Government contract, it shall be subject to restrictions as set forth in subparagraph (C)(1)(ii) of Defense Federal Acquisitions Regulations (DFARs) Section 252.227-7013 for Department of Defense contracts, and as set forth in Federal Acquisitions Regulations (FARs) Section 52.227-19 for civilian agency contracts or any successor regulations. If further government regulations apply, it is your responsibility to ensure compliance with such regulations.



Safety Information

This section outlines important liability and safety guidelines concerning your new PC card.

Important Notice

Because of the nature of wireless communications, transmission and reception of data can never be guaranteed. Data may be delayed, corrupted (i.e., have errors) or totally be lost. Although significant delays or losses of data are rare when wireless devices such as the PC Card-Model KPC650 CDMA modem are used in a normal manner with a well constructed network, they should not be used in situations where failure to transmit or receive data could result in damage of any kind to the user or another party, including but not limited to personal injury, death or loss of personal property. No responsibility for damages of any kind resulting from delays or errors in data transmitted or received using the PC Card-Model KPC650 CDMA modem, or for failure of the PC Card-Model KPC650 to transmit or receive such data.

Safety and Hazards

Blasting Areas and Hospitals—Do not operate the PC Card-Model KPC650 in areas where blasting is in progress, where explosive atmospheres may be present, near medical equipment, life support equipment, or any equipment which may be susceptible to any form of radio.

Aircraft—FCC regulations prohibit using your KPC650 on a plane that is in the air. Do not operate the PC card in any aircraft whether the aircraft is on the ground or in flight. In aircraft, the PC card must be powered off. When operating it can transmit signals that could interfere with various onboard systems.

Vehicles—RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles. Check with the manufacturer of the device to determine if it is adequately shielded from external RF energy

Air bags—If your vehicle has an air bag, DO NOT place installed or portable equipment or other objects over the air bag or in the air bag deployment area. If equipment is not properly installed, you and your passengers risk serious injury.

Medical devices

Pacemakers—Warning to pacemaker wearers: PC card, when in the ‘on’ position, may interfere with pacemakers. The PC card should be kept at least 15 cm (6 inches) away from the pacemaker to reduce risk. If you have any reason to suspect that interference is taking place, turn off your phone immediately. Contact your cardiologist for more information.

Other medical devices—If you use any other personal medical device, consult the manufacturer of the device to determine if it is adequately shielded from external RF energy. Your physician may be able to help you obtain this information.

In health care facilities—Turn your PC card off in health care facilities when instructed. Hospitals and health care facilities may be using equipment that is sensitive to external RF energy.

Posted facilities—Turn your PC card off in any facility when posted notices require you to do so.

Potentially explosive atmospheres—Turn off your PC card when you are in any area with a potentially explosive atmosphere. Obey all signs and instructions. Sparks in such areas could cause an explosion or fire, resulting in bodily injury or death. Areas with a potentially explosive atmosphere are often, but not always, clearly marked. They include:

- fueling areas such as gas stations
- below deck on boats
- transfer or storage facilities for fuel or chemicals
- vehicles using liquefied petroleum gas, such as propane or butane
- areas where the air contains chemicals or particles such as grain, dust, or metal powders
- any other area where you would normally be advised to turn off your vehicle engine

Consumer Limited Warranty

Kyocera Wireless Corp. (“KYOCERA”) offers you a limited warranty that the enclosed product or products (the “Product”) will be free from defects in material and workmanship for a period that expires one year from the date of sale of the Product to you, provided that you are the original end-user purchaser of the Product and provided that your purchase was made from an authorized supplier. Transfer or resale of a Product will automatically terminate warranty coverage with respect to that Product. This limited warranty is not transferable to any third party, including but not limited to any subsequent purchaser or owner of the Product.

KYOCERA shall, at its sole and absolute discretion, either repair or replace a Product (which unit may use refurbished parts of similar quality and functionality) if found by KYOCERA to be defective in material or workmanship, or if KYOCERA determines that it is unable to repair or replace such Product, KYOCERA shall refund the purchase price for such Product, provided that the subject Product (i) is returned, with transportation prepaid, to a KYOCERA authorized service center within the one year warranty period, and (ii) is accompanied by a proof of purchase in the form of a bill of sale or receipted invoice which evidences that the subject Product is within the one year warranty period (“Proof of Purchase”). After the one year warranty period, you must pay all shipping, parts and labor charges.

This limited warranty does not cover and is void with respect to the following: (i) any Product which has been improperly installed, repaired, maintained or modified; (ii) any Product which has been subjected to misuse (including any Product used in conjunction with hardware electrically or mechanically incompatible or used with accessories not approved by KYOCERA), abuse, accident, physical damage, abnormal operation, improper handling, neglect, exposure to fire, water or excessive moisture or dampness or extreme changes in climate or temperature; (iii) any Product operated outside published maximum ratings; (iv) cosmetic damage; (v) any Product on which warranty stickers or Product serial numbers have been removed, altered, or rendered illegible; (vi) cost of installation, removal or reinstallation; (vii) signal reception problems (unless caused by defects in material and workmanship); (viii) damage the result of fire, flood, acts of God or other acts which are not the fault of KYOCERA and which the Product is not specified to tolerate, including damage caused by mishandling, shipping and blown fuses; (ix) consumables (such as fuses); or (x) any Product which has been opened, repaired, modified or altered by anyone other than KYOCERA or a KYOCERA authorized service center.

USE ONLY KYOCERA APPROVED ACCESSORIES WITH KYOCERA PHONES. USE OF ANY UNAUTHORIZED ACCESSORIES MAY BE DANGEROUS AND WILL INVALIDATE THE PHONE WARRANTY IF SAID ACCESSORIES CAUSE DAMAGE OR A DEFECT TO THE PHONE.

KYOCERA SPECIFICALLY DISCLAIMS LIABILITY FOR ANY AND ALL DIRECT, INDIRECT, SPECIAL, GENERAL, PUNITIVE, EXEMPLARY, AGGRAVATED, INCIDENTAL OR CONSEQUENTIAL DAMAGES, EVEN IF ADVISED OF THE POSSIBILITY THEREOF, WHETHER FORESEEABLE OR UNFORESEEABLE OF ANY KIND WHATSOEVER, INCLUDING BUT NOT LIMITED TO LOSS OF PROFITS, UNANTICIPATED BENEFITS OR REVENUE, ANTICIPATED PROFITS ARISING OUT OF USE OF OR INABILITY TO USE ANY PRODUCT (FOR EXAMPLE, WASTED AIRTIME CHARGES DUE TO THE MALFUNCTION OF A PRODUCT) OR CONTRIBUTION OR INDEMNITY IN RESPECT OF ANY CLAIM RELATED TO A PRODUCT.

REPAIR OR REPLACEMENT OF A DEFECTIVE PRODUCT OR REFUND OF THE PURCHASE PRICE RELATING TO A DEFECTIVE PRODUCT, AS PROVIDED UNDER THIS WARRANTY, ARE YOUR SOLE AND EXCLUSIVE REMEDIES FOR BREACH OF THE LIMITED WARRANTY, AND SUBJECT TO THIS WARRANTY, THE PRODUCTS ARE APPROVED AND ACCEPTED BY YOU “AS IS”. KYOCERA MAKES NO OTHER WARRANTIES, REPRESENTATIONS OR CONDITIONS OF ANY KIND, ORAL OR VERBAL, EXPRESS OR IMPLIED, STATUTORY OR OTHERWISE, WITH RESPECT TO THE PRODUCTS, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTY OR CONDITION OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE OR AGAINST INFRINGEMENT OR ANY IMPLIED WARRANTY OR CONDITION



ARISING OUT OF TRADE USAGE OR OUT OF A COURSE OF DEALING OR COURSE OF PERFORMANCE. NO DEALER, DISTRIBUTOR, AGENT OR EMPLOYEE IS AUTHORIZED TO MAKE ANY MODIFICATION OR ADDITION TO THIS WARRANTY.

Some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, or allow limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you.

This limited warranty gives you specific legal rights, and you may also have other rights which vary from jurisdiction to jurisdiction.

For warranty service information, please call the following telephone number from anywhere in the continental United States and Canada: 1-800-349-4478 or 858-882-1401; or contact KYOCERA at the following address:
10300 Campus Point Drive, San Diego, California, 92121-1582, USA, Attention: Technical Support.

DO NOT RETURN YOUR PRODUCTS TO THE ABOVE ADDRESS. Please call or write for the location of the Kyocera Wireless Corp. authorized service center nearest you and for procedures for obtaining warranty service.